



Level- and temperature switch

Nivotemp NT MD

Installation and Operation Instructions

Original instructions





Bühler Technologies GmbH, Harkortstr. 29, D-40880 Ratingen
Tel. +49 (0) 21 02 / 49 89-0, Fax: +49 (0) 21 02 / 49 89-20
Internet: www.buehler-technologies.com
E-Mail: fluidcontrol@buehler-technologies.com

Read this instruction carefully prior to installation and/or use. Pay attention particularly to all advises and safety instructions to prevent injuries. Bühler Technologies can not be held responsible for misusing the product or unreliable function due to unauthorised modifications.

All rights reserved. Bühler Technologies GmbH 2023

Document information

Document No..... BE100022

Version..... 11/2020

Contents

1	Introduction	3
1.1	Intended Use	3
1.2	Functionality	3
1.2.1	Liquid level monitoring	3
1.2.2	Temperature monitor	3
1.3	Design types	3
1.4	Model key	4
1.5	Scope of Delivery	4
2	Safety instructions	5
2.1	Important advice	5
2.2	General hazard warnings	6
3	Transport and storage	7
4	Setup and connection	8
4.1	Installation	8
4.2	Electrical connections	9
4.3	Information on the correct operation of reed contacts in Bühler level switches	9
5	Operation and control	11
5.1	Start-up procedure	11
5.2	LED statuses	11
5.3	General key functions	12
5.4	Keylock enabled	12
5.5	Menu overview	13
5.6	Changing basic settings	14
5.6.1	Disabling normal error handling	14
5.6.2	Define switching outputs	14
5.6.3	Set temperature unit	15
5.6.4	Set display refresh rate	15
5.6.5	Enable/disable keylock	15
5.6.6	Restore factory settings (Reset)	16
5.7	Switching outputs	17
5.7.1	Switching output x: Definition of the switching characteristic	18
5.7.2	Switching output x: Upper switching limit (switching point)	19
5.7.3	Switching output x: Lower switching limit (switch-back point)	19
5.7.4	Switching output x: Switch-on delay	20
5.7.5	Switching output x: Switch-back delay	20
5.7.6	Switching output x: Testing the switching output	20
5.7.7	Change status LED display function	21
5.8	Analogue outputs	22
5.8.1	Analogue output x: Assigning the upper limit	22
5.8.2	Analogue output x: Lower limit assignment	22
5.8.3	Analogue output x: Signal type assignment	22
5.8.4	Analogue output x: Testing the analogue output	23
5.9	Diagnostic options	23
5.9.1	View logbook	23
5.9.2	Maximum and minimum temperature	24
5.9.3	Define switching output to log	24
5.9.4	Delay for storing the Min/Max Temperature	25
6	Cleaning and Maintenance	26
7	Service and repair	27
7.1	Troubleshooting	27
7.2	Spare parts and accessories	28
8	Disposal	29
9	Appendices	30
9.1	Technical Data NT MD	30

9.2	Temperature outputs NT MD	31
9.3	Standard pin assignment NT MD	31
9.4	Current settings	32
9.5	Display ranges	32
9.6	Display resolution	32
9.7	Menu Sequence Overview	34
10	Attached documents	35

1 Introduction

1.1 Intended Use

Level switches are used to monitor the liquid level and temperature in fluid systems.

Level switches must not be used in highly flammable or corrosive liquids.

The medium must not contain particles, particularly metallic particles, to prevent deposits on the float or between the float and switching tube. If necessary, filter the medium.

Please note the technical data in the appendix for the specific intended use, existing material combinations, as well as temperature limits.

WARNING



All device models are solely intended for industrial applications. They are **not safety components**. The devices must not be used if failure or malfunction thereof jeopardises the safety and health of persons. Use in explosive areas is **prohibited**.

1.2 Functionality

1.2.1 Liquid level monitoring

The measuring tube is located inside the tank. The level switches are located inside the measuring tube. These are activated by a magnet inside the level switch float.

The contacts are locked onto a bent rail, spaced as specified in the purchase order.

1.2.2 Temperature monitor

Temperature is monitored via temperature sensor (Pt100) inside the sensor tube. Depending on the version, there are several switching outputs combined with one analogue output (4 - 20 mA). The temperature is shown in the display.

Please note the technical data in the appendix.

1.3 Design types


The level switch is equipped with different switching and analogue outputs based on the configuration. The outputs are freely programmable.

The level switch can be equipped with the following options:

OV	Oval flange
G1	Adapter to G1" flange

Please refer to the type plate for your equipment configuration. In addition to the job number, this also contains the item number and type designation.

1.4 Model key

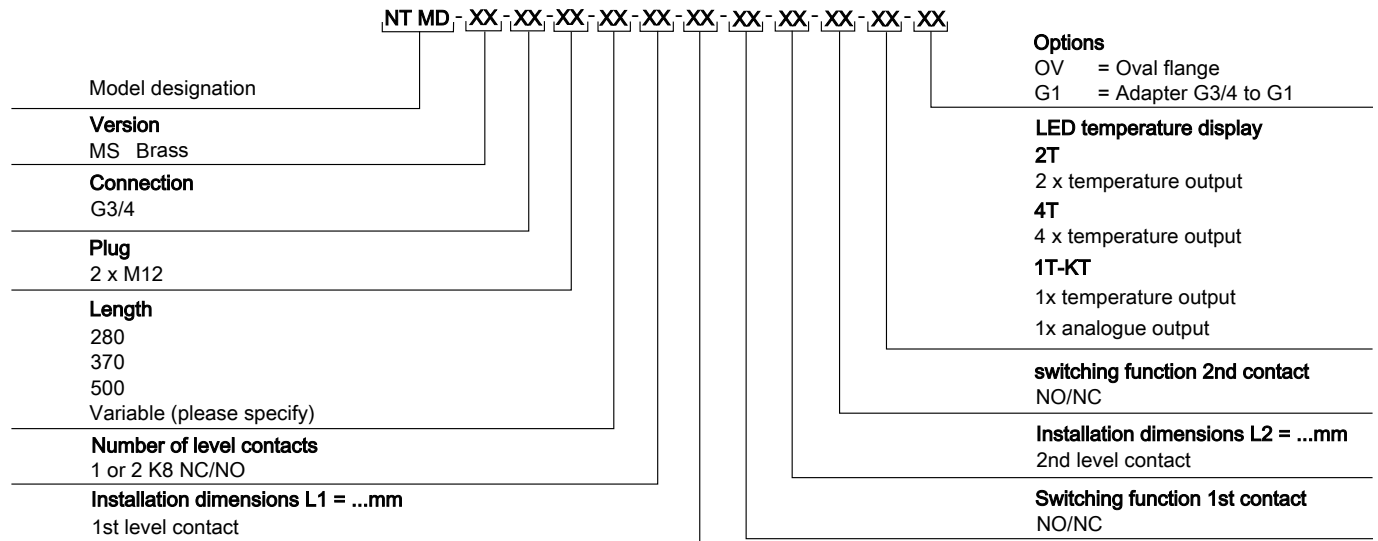

1.5 Scope of Delivery

- Level switch
- Product documentation
- Connection/mounting accessories (optional)

2 Safety instructions

2.1 Important advice

Operation of the device is only valid if:

- the product is used under the conditions described in the installation- and operation instruction, the intended application according to the type plate and the intended use. In case of unauthorized modifications done by the user Bühler Technologies GmbH can not be held responsible for any damage,
- when complying with the specifications and markings on the nameplates.
- the performance limits given in the datasheets and in the installation- and operation instruction are obeyed,
- monitoring devices and safety devices are installed properly,
- service and repair is carried out by Bühler Technologies GmbH,
- only original spare parts are used.

This manual is part of the equipment. The manufacturer keeps the right to modify specifications without advanced notice. Keep this manual for later use.

Signal words for warnings

DANGER	Signal word for an imminent danger with high risk, resulting in severe injuries or death if not avoided.
WARNING	Signal word for a hazardous situation with medium risk, possibly resulting in severe injuries or death if not avoided.
CAUTION	Signal word for a hazardous situation with low risk, resulting in damaged to the device or the property or minor or medium injuries if not avoided.
NOTICE	Signal word for important information to the product.

Warning signs

These instructions use the following warning signs:

	Warns of a general hazard		Unplug from mains
	Voltage warning		Wear respiratory equipment
	Warns not to inhale toxic gasses		Wear a safety mask
	Warns of corrosive liquids		Wear gloves
	General information		

2.2 General hazard warnings

The equipment must be installed by a professional familiar with the safety requirements and risks.

Be sure to observe the safety regulations and generally applicable rules of technology relevant for the installation site. Prevent malfunctions and avoid personal injuries and property damage.

The operator of the system must ensure:

- Safety notices and operating instructions are available and observed,
- The respective national accident prevention regulations are observed,
- The permissible data and operational conditions are maintained,
- Safety guards are used and mandatory maintenance is performed,
- Legal regulations are observed during disposal,
- compliance with national installation regulations.

Maintenance, Repair

Please note during maintenance and repairs:

- Repairs to the unit must be performed by Bühler authorised personnel.
- Only perform conversion-, maintenance or installation work described in these operating and installation instructions.
- Always use genuine spare parts.
- Do not install damaged or defective spare part. If necessary, visually inspect prior to installation to determine any obvious damage to the spare parts.

Always observe the applicable safety and operating regulations in the respective country of use when performing any type of maintenance.

The method for cleaning the devices must be adapted to the IP protection class of the devices. Do not use cleaners which could damage the device materials.

DANGER



Toxic, acidic gases/liquids

Protect yourself from toxic, corrosive gasses/liquids when performing any type of work.
Wear appropriate protective equipment.



3 Transport and storage

Only transport the product inside the original packaging or a suitable alternative.

The equipment must be protected from moisture and heat when not in use. It must be stored in a covered, dry, dust-free room at room temperature.

4 Setup and connection

DANGER



Electric voltage

Risk of electric shock

- Always disconnect the unit from the mains before performing work.
- Secure the equipment from accidental restarting.
- The equipment may only be installed, maintained and put into operation by instructed, competent personnel.
- Always observe the applicable safety regulations for the operating site.



DANGER



Toxic, acidic gases/liquids

Protect yourself from toxic, corrosive gasses/liquids when performing any type of work. Wear appropriate protective equipment.



4.1 Installation

Please note before installing the level switch!

After transport and delivery of the level switch, the switching status of the bistable contacts may be different than required for proper operation.

Therefore slide the float for the level switch along the level switch tube from below immediately before installation.

This ensures all built-in bistable contacts have a clearly defined switching status (NC or NO).

The level switch comes fully assembled and can be mounted to the tank using the screw-in thread. Please be sure the float can move freely and to leave enough space between the tank wall and add-ons.

After removing the float, where applicable, be sure the magnet inside the float is above the fluid level. This can easily be verified with a piece of iron to determine the magnet position inside the float.

DANGER



Electric voltage

Risk of electric shock

When connecting devices, please note the maximum voltages and currents (see technical data) and use the correct wire cross-sections and circuit breakers.

When selecting the connection lines, also note the maximum operating temperatures of the devices.

Installation in special areas of application:

If the device will be installed outdoors or in wet areas, the maximum operating voltage is max. 16 V DC effective or 35 V DC.




The flange-mounted display units can be swivelled vertically by approx. 270° so they are easier to read. Please note the built-in swivel stop. You will notice more resistance when reaching the stop. Turning it beyond this stop may damage the display unit.

4.2 Electrical connections

Electricity is supplied via plug connectors. Please refer to the appendix for installation dimensions, nominal voltage and plug configuration.

The temperature switching outputs are PNP transistors (see illustration):

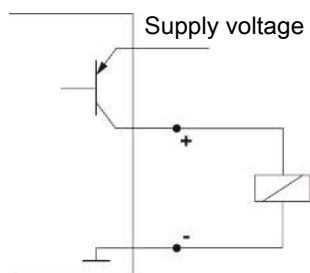

Note: When measuring the switching output with high-load measuring device inputs or when used as a frequency output, the load must be set to 10 kΩ between the output and earth (GND) to avoid faulty measurements.

4.3 Information on the correct operation of reed contacts in Bühler level switches

Based on their construction, reed contacts are very long lasting and reliable components. Yet the following should be considered when using them:

Life of reed switches



The life of reed switches can be up to 10^9 cycles. This is reduced by high stress and / or incorrect or the absence of protective circuits when switching inductive, capacitive or lamp loads.

It's therefore important to ensure NEVER to exceed one or several of the maximum approved limits, even temporarily, and to install a contact protective circuit for loads which are not purely ohmic. Using test lamps when installing the devices is also prohibited, as these can temporarily allow too much current to flow, which can damage the reed contacts. In this case non-volatile testing equipment should always be used.

Contact protective circuits for reed switches

For direct current voltage a recovery diode per figure A must be connected parallel to the contact.

For alternating current voltage an RC circuit per Figure B and Table 1 must be connected parallel to the contact.

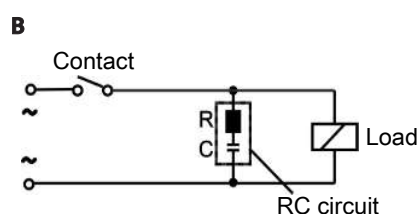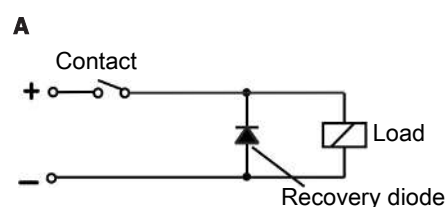

Load in VA		10		25		50	
Voltage at contact V		R/Ohm	C/μF	R/Ohm	C/μF	R/Ohm	C/μF
24		22	0.022	1	0.1	1	0.47
60		120	0.0047	22	0.022	1	0.1
110		470	0.001	120	0.0047	22	0.022
230		470	0.001	470	0.001	120	0.0047

Please note the max. voltage/load ratings of the respective level contacts!

Voltages and currents

All Bühler level contacts with reed switch can switch minimal Switching voltages of 10 μ V and minimal switching currents of 1 μ A.

The maximum values specified for the respective contact types apply.

Level contact with reed switches can therefore be used for SPS applications as well as for high loads (within the maximum limits) without hesitation.

Contact material

All reed switches in Bühler level contacts use rhodium as the contact material for the actual contact areas.

Magnetic fields

Avoid external magnetic fields, including from electric motors. These can interfere with the function of the reed switches.

Mechanical loads

Do not expose the level switch to strong blows or bending.

5 Operation and control

NOTICE




The device must not be operated beyond its specifications.

5.1 Start-up procedure

The device will automatically switch on when connected to power. It will first briefly display the software version, at which time the device will also check the built-in components. The display will then switch to displaying measurements.

The following describes the function of the display and control unit:




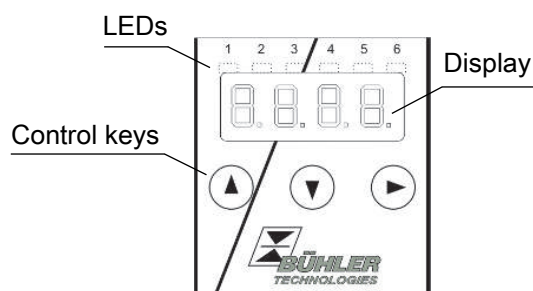


If an error message appears in the display during operation, please refer to the **Troubleshooting** table under chapter “Service and Repair”.

5.2 LED statuses

LEDs above the measurement display indicate the status of the temperature switching outputs. The LEDs are permanently assigned to the switching outputs.

The following table shows the factory settings:

	LED 1 – yellow Status switching output 1
	LED 2 - red Status switching output 2 (if applicable)
	LED 3 – yellow Status switching output 3 (if applicable)
	LED 4 – red Status switching output 4 (if applicable)

The switching characteristics of the LED (on if switching contact closed or open) can be changed.

5.3 General key functions

The keys below the display are used for operation.

The menu controls are detailed in the following chapters.

Key	Mode	Function
▶	– Measurement display:	Change measured variables displayed.
	– In the menu:	Move down one menu level. Move up one menu level.
	– At the end of the menu:	 The display indicates the end of the menu.
	– Following input/selection:	Confirm and save a numerical value entered or a function selection. The display will flash if a parameter has been changed.
▲	– Measurement display:	Displays the configuration.
	– In the menu:	Scroll up menu item, numerical value or function selection. Holding the key will continuously scroll.
▼	– Measurement display:	Go to main menu.
	– In the menu:	Scroll down menu item, numerical value or function selection. Holding the key will continuously scroll.
▼ + ▶	– In the menu:	Exit the main / sub / drop-down menu and return to displaying the measurement without saving changes to the parameters.
▲ + ▶	– In the menu:	Move to the next higher menu level.
60 s no action	– In the menu:	Exit the main / sub/ drop-down menu.

To select a menu item and to enter values:

- Open the main menu with the ▼ key.
- Select the submenu with the ▼ and ▲ keys and open the submenu with the ▶ key.
- If necessary, select the next submenu with the ▼ and ▲ keys and open with the ▶ key.
- Select the desired menu item with the ▼ and ▲ keys and open the list of values with the ▶ key.
- Set the value with the ▼ and ▲ keys and confirm with the ▶ key. The new settings will be saved and the device will return to the submenu.
- Select the menu item EXIT to exit the submenu and confirm with the ▶ key. The device will return to the next menu level up or to the measurement display.

5.4 Keylock enabled

With the keylock enabled, selecting the menu with the ▼ key will display  in place of the main menu. The active digit will be indicated by a dot.

- Use the ▲ and ▼ keys to enter the code and confirm with the ▶ key. The active digit will move one place to the right. After entering the 3rd digit the main menu will open.


If the wrong code is entered, the device will return to the measurement display. If you forgot the password you can always enter master code 287 to access the menu.

You can cancel the keylock under *Loc* in submenu **Basic Settings Advanced Options** *bEF* and enter 000 to reset the code.

5.5 Menu overview

The menu structure is based on the VDMA standard sheet 24574-1. The menu structure is hierarchic. The top menu level contains the main menu items, e.g. **tEMP**, **bEF**, **d, R**, **E**. Each main menu has additional submenu items.

The menu items may vary depending on the device configuration. Not all menu items described below will necessarily apply to your device. Press the **▲** key in display mode to open the configuration. A 4-digit code will appear, e.g.

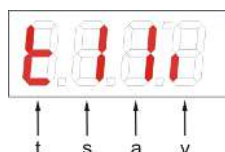

With the 4 digits tsav meaning:

t: Model

s: Number of switching outputs

a: Number of analogue outputs

v: Device installation type


t = temperature measurement

1, 2 or 4

0 for 1

i = standard installation (tank installation)

F = remote display

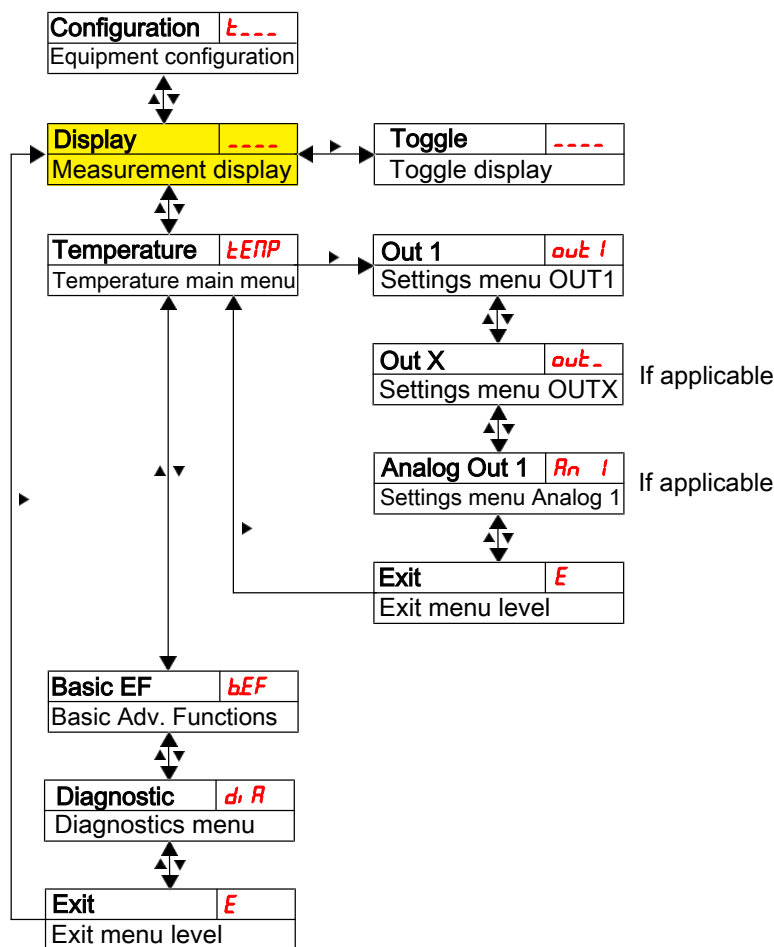

The individual menu items will not be shown if the option does not apply. Example: With a=0 the menu items for configuring the analogue output does not apply. You can then skip the description for this item.

The switching outputs or analogue outputs can be configured in the **Temperature** (**tEMP**) main menu.

The basic device settings can be changed. General settings can be configured under **Basic Settings Advanced Functions** (**bEF**). These settings should be configured first, as they affect the displays and settings for the individual menus. These settings are e.g. the units used.

The **Diagnostic** (**d, R**) menu further contains diagnostics options.

For the detailed illustration of the entire menu structure please refer to the original operating instructions at the end of this chapter.

5.6 Changing basic settings

The general basic settings can be changed under menu **Basic Settings Extended Functions** (*bEF*). These settings will affect the measurement display and the configuration options in the various main menus. Here you can also change the switching output assignment.

- Press the ▼ key to open the main menu.
- Select menu item (*EF*) using the ▼ and ▲ keys and open the menu with the ► key.

NOTICE





Disabling normal error handling

Disabling normal error handling and analysis could potentially cause dangerous operating states, dangers to the user or machines. Before using this option, review the hazard potential within the process. With this setting, Bühler Technologies GmbH assumes no liability for injuries to health or material damage caused by this setting.

5.6.1 Disabling normal error handling

Here you can enable/disable normal error handling and analysis

The function Disable error handling (*Errh*) is used to disable normal error handling and analysis. This may pose dangers to the user or machine.



The options are:



Disables normal error handling.



Enables normal error handling (default)

Important note: When exceeding the measuring range or if sensor errors occur, the measurement will be frozen and all six LEDs in the status bar will blink. When the measurement returns to the permissible range the LEDs will stop blinking and the display will refresh again as usual.


5.6.2 Define switching outputs

Here you can define the switching outputs.


Use the “Define switching outputs” function to define the switching outputs (*rou1* and *rou2*). The switching outputs can be configured as *Err*, *oil* and *TEMP*.



The options are:



Err



oil



TEMP

Options:

[*Err*, *oil*, *TEMP*]

Note:

- Switching outputs 1 and 2 can alternatively be wired as error indicators. In this case the output will be connected as a NC contact which opens when exceeding the range or if an error occurs. The LED assigned to this output will generally not be activated, as all 6 LED's in the status bar will blink if an error occurs.
- When defining a switching output as an error indicator it will no longer be an option for normal switching output settings.

5.6.3 Set temperature unit

This is where the unit symbol for the temperature is configured:



The options are:



Degrees
Celsius



Degrees
Fahrenheit

Note:

- Values are automatically converted and the measuring range adjusted. However, always check the respective switching points and switch-back points.

5.6.4 Set display refresh rate

The refresh rate of the display can be changed based on the application. The display can also be completely disabled. The LEDs will remain functional.



The options are:



fast



medium



slow




Display off

Note:

- Error messages will still appear, even with the display off.

5.6.5 Enable/disable keylock

The keylock can be enabled to prevent unauthorised changes to the device settings.



The keylock will be enabled after entering at least one digit > 0. A dot indicates the active digit during this input.



Setting range:
000 to 999




- Use the ► key to open the list of values:
- Enter the digit using the ▼ and ▲ keys (0 to 9) and press the ► key to confirm. The active digit will move one place to the right.
- Lastly, press the ► key to confirm the code. The device will now return to the submenu.

Note:

- To disable the keylock enter: 000

5.6.6 Restore factory settings (Reset)

Use the Reset function (*rES*) to restore the factory settings. All changes will be lost. Since this will also reset the limits, you must check the temperature settings.



The options are:



Original status:
No,
keep current settings



Original status:
Yes,
reset settings to the factory defaults.

The factory settings are:

Definitions:

<i>SP X / rPX</i>	Switching point / switch-back point x
<i>dS X / drX</i>	Switch-on delay / switch-back delay for switching output x
<i>R xHi / R xLo</i>	Maximum and minimum measurement for output
<i>Rou X</i>	Analogue output signal type
<i>ou X</i>	Switching characteristic for switching output x
<i>tun1</i>	Temperature unit
<i>d1 S</i>	Display refresh rate
<i>L oc</i>	Keylock
<i>Sdow</i>	Switching output logged
<i>dtm</i>	Delay for recording the minimum / maximum temperature

Note: For customer-specific specifications the factory preset may vary from those listed here.

Basic settings:

Basic Settings

<i>tun1</i>	<i>C</i>
<i>d1 S</i>	<i>FAST</i>
<i>L oc</i>	<i>000</i>
<i>tcl *</i>	<i>000</i>
<i>tcc*</i>	<i>050/1</i>

*for wall-mounting only

Version with 1 switching output:

Switching outputs

<i>SP 1 / rP 1</i>	<i>50 / 45</i>
<i>dS 1 / dr 1 / ou 1</i>	<i>0 / 0 / Hno</i>

Version with 2 switching outputs:

Switching outputs

<i>SP 1 / rP 1</i>	<i>50 / 45</i>
<i>dS 1 / dr 1 / ou 1</i>	<i>0 / 0 / Hno</i>
<i>SP 2 / rP 2</i>	<i>60 / 55</i>
<i>dS 2 / dr 2 / ou 2</i>	<i>0 / 0 / Hno</i>

Version with 4 switching outputs:

Switching outputs

SP1 / rP1	50 / 45
dS1 / dr1 / ou1	0 / 0 / Hno
SP2 / rP2	60 / 55
dS2 / dr2 / ou2	0 / 0 / Hno
SP3 / rP3	70 / 65
dS3 / dr3 / ou3	0 / 0 / Hno
SP4 / rP4	80 / 75
dS4 / dr4 / ou4	0 / 0 / Hno

Version with analogue output:

Analogue output

RAH / RLo / Rdu1	0 / 100 / 1
------------------	-------------


Diagnostic settings:

Diagnostics

Sduu	out1
dLnn	00

5.7 Switching outputs

All switching outputs are configured the same way. The switching output number is therefore represented by x. Open the switching output to be configured from the menu for the respective measured variable.




The switching output allocation and other basic settings related to all switching outputs can be configured in menu **Basic Settings Advanced Functions**.

Use submenu **Advanced Functions** to configure additional settings for each individual switching output which e.g. affect the switching characteristics of the output. The output can also be tested here.

5.7.1 Switching output x: Definition of the switching characteristic

The switching characteristic for the output can be configured under the following menu:



ou_

The options are:

Hysteresis Function

NO contact or NC contact function when the output signal is set when exceeding the configured switching point. The output signal will be deleted if the value is below the configured switch-back point.

Hno

Hysteresis function as the NO contact


Hnc

Hysteresis function as the NC contact

Here, NO contact (H_{no}) means the PNP switching output is closed above switching point SP_x and opens below switching point rP_x .

Here, NC contact (H_{nc}) means the PNP switching output is open above switching point SP_x and closes below switching point rP_x .

Also see the explanation in the drawing below.

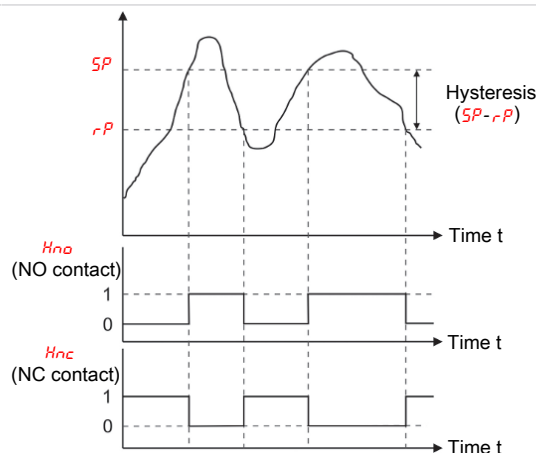

Window function

NO contact or NC contact function defining a signal window. When the measuring window is reached the output signal is set and deleted upon exiting.

Fno


Window function as NO contact

Fnc

Window function as NC contact

Here, NO contact (F_{no}) means the PNP switching output is closed if the value is within the window. Otherwise the switching output will be open.

Here, NC contact (F_{nc}) means the PNP switching output is open if the value is within the window. Otherwise the switching output will be closed.

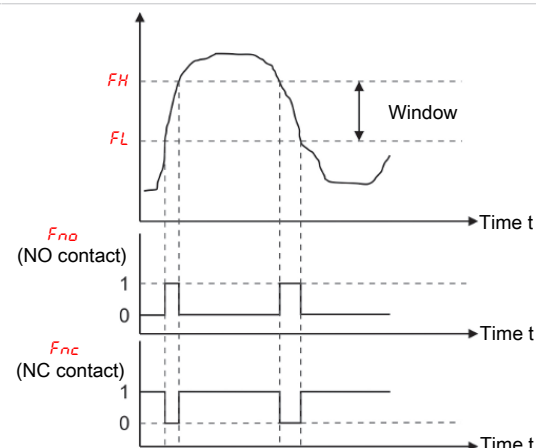

Frequency output


If the output is defined as a frequency output, a square wave signal with a frequency between 1 Hz and 100 Hz proportional to the measurement will be output.

FN


Frequency output

Note: To increase the slew rate of the square wave signal, we recommend loading the switching output with an load of 10 kΩ.

Example: $F_{ILO} = 15^\circ\text{C}$, $F_{IHi} = 80^\circ\text{C}$
with temperature T and frequency f:


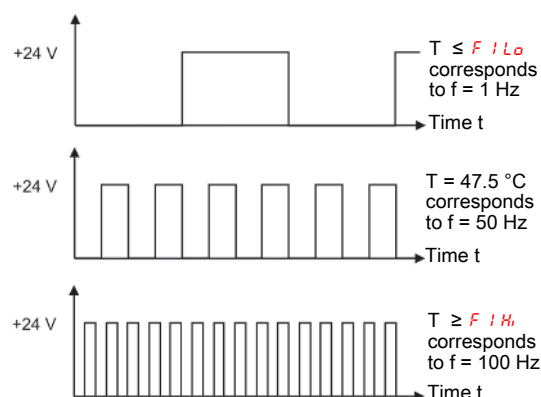


Note: The designation of the switching function may vary:

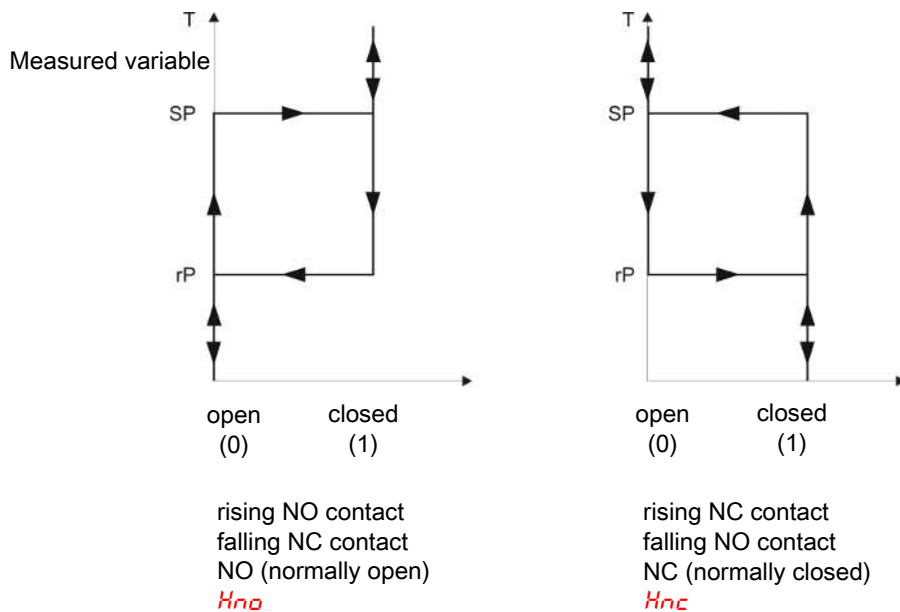

5.7.2 Switching output x: Upper switching limit (switching point)

The upper switching limit for switching output Out x can be defined with the following submenu:



Setting range:
0 °C to 100 °C
(32 °F to 212 °F)



Switching point for OUT x

Note:

- The switching point must be set to within the range limits (see menu **Basic Settings Advanced Functions**).
- If switching output OUT x was assigned the function **Window**, *FHI* will appear. The setting corresponds with the upper window limit.
- If switching output OUT x was assigned the function **Frequency output**, *F I.Hi* will appear. The setting corresponds to the frequency 100 Hz.

5.7.3 Switching output x: Lower switching limit (switch-back point)

The lower switching limit for switching output Out x can be defined with the following submenu:



Setting range:
0 °C to 100 °C
(32 °F to 212 °F)

Switch-back point for OUT x

Note:

- The switch-back point must be set to within the range limits and must always be lower than the switching point.
- If switching output OUT x was assigned the function **Window**, *FLI* will appear. The setting corresponds with the lower window limit.
- If switching output OUT x was assigned the function **Frequency output**, *F I.Lo* will appear. The setting corresponds to the frequency 1 Hz.

5.7.4 Switching output x: Switch-on delay

The menu **Advanced Functions** *EFx* is used to configure additional settings for switching output x. The submenu is at the second submenu level.

The switching and switch-back delay prevents the alarm being triggered too frequently in unstable conditions. The switching delay can be configured with the following menu:

Measured variable <i>----</i>	→	Out X <i>out_</i>	→	EF X <i>EF_</i>	→	Delay SP X <i>d5_</i>	→	Selection menu <i>---</i>
Measured variable main menu		Settings menu OUTX		Advanced Functions		Delay OUTX On		0 - 100



Setting range:
0...100 seconds

Time span in seconds during which the signal must be continuously present for the switching output to respond.


Note:

- If switching output OUT x was assigned the function **Window**, the setting corresponds to the switch-on delay which detects valid reaching of the measuring window.
- If switching output OUT x was assigned the function **Frequency output**, this value will have no affect.

5.7.5 Switching output x: Switch-back delay

The switch-back delay can be configured with the following menu:

Measured variable <i>----</i>	→	Out X <i>out_</i>	→	EF X <i>EF_</i>	→	Delay RP X <i>dr_</i>	→	Selection menu <i>---</i>
Measured variable main menu		Settings menu OUTX		Advanced Functions		Delay OUTX Off		0 - 100



Setting range:
0...100 seconds

Switch-back signal delay for OUT x.

Time span in seconds during which the signal must be continuously present for the switching output to respond.


Note:

- If switching output OUT x was assigned the function **Window**, the setting corresponds to the switch-on delay which detects valid closing of the measuring window.
- If switching output OUT x was assigned the function **Frequency output**, this value will have no affect.

5.7.6 Switching output x: Testing the switching output

The switching output test can be started with the following menu:

Measured variable <i>----</i>	→	Out X <i>out_</i>	→	EF X <i>EF_</i>	→	Check Out X <i>Co_</i>	→	Selection menu <i>---</i>
Measured variable main menu		Settings menu OUTX		Advanced Functions		Functional test OUTX		noP - on



Switching output test option

Options when setting *ou 1* to *Hno* / *Hnc* / *Fno* / *Fnc*:



Normal switching output operation

Switching output permanently off disabled

Switching output permanently activated

Options when setting *ou 1* to *F? :*



Normal mode as frequency output

Output Frequency 1 Hz

Output Frequency 100 Hz



Note:

- After completing the test, set the function to normal mode *noP*.

5.7.7 Change status LED display function

The LEDs in the display indicate the switching status of the output. The following table shows how LEDs are allocated to the switching output:

Numbering LED	Switching output x	Assignment for 1 switching output	Assignment for 2 switching outputs	Assignment for 4 switching outputs
LED	1	LED 1 - yellow	LED 1 - yellow	LED 1 - yellow
1 2 3 4 5 6	2		LED 2 - red	LED 2 - red
	3			LED 3 - yellow
	4			LED 4 - red

In the factory setting the LED indicates the physical status of the PNP switching output (switching output closed – LED on).

The logical indicator function may need to be different from the physical signal on the switching output. You can therefore also reverse this indication with this menu (switching output open – LED on).

Example:

You have 2 switching outputs for the temperature, configured as:

- **Switching output 1:** Max contact, rising NO contact. The LED lights up when exceeding the maximum temperature and the temperature is higher than the desired range. So this LED lighting up indicates an “Error” status.
- **Switching output 2:** Min contact, rising NO contact. So in the factory setting, the LED lights up when exceeding the minimum temperature. So in this case the LED would light up if the status is okay.


The table shows an example with the factory setting and with inverted status function for LED3. The switching points are defined as:

SP3 = 70 °C, rP3 = 65 °C

SP4 = 80 °C, rP4 = 75 °C

	Factory setting	Status function LED 3 inverted	State	Status
A	 LED3 ON	 LED3 OFF	Temperature rises to > 70 °C PNP switching output 3 closed	OK
B	 LED4 and LED3 ON	 only LED4 ON	Temperature rises to > 80 °C PNP switching output 4 closed	Error
C	 LED3 ON	 LED 3 OFF	Temperature falls to < 75 °C PNP switching output 4 open	OK
D	 LED3 OFF	 LED3 ON	Temperature falls to < 65 °C PNP switching output 3 open	Error

Here you can reverse the LED status function for a contact: the LED lights up if the contact is open, so below the minimum temperature, and the LED lighting up again indicates an “Error” status.





The options are:



LED = output;

the LED lights up when the PNP switching output is closed.



LED = -output;

the LED lights up when the PNP switching output is open.

NOTICE




The display function of the status LED affects event logging! Please note chapter “Diagnostic options”.

5.8 Analogue outputs

5.8.1 Analogue output x: Assigning the upper limit

Used to configure at which temperature to output the maximum analogue signal. This is configured in menu:




Setting range:
0 °C to 100 °C
(32 °F to 212 °F)

Note:

- The output range setting must not be less than 10 % of the measuring range: $A ! H_ - A ! L_ \geq 10\%$
- If the range is set too low, the analogue value output may have grades.

5.8.2 Analogue output x: Lower limit assignment

Used to configure at which temperature to output the minimum analogue signal. This is configured in menu:





Setting range:
0 °C to 100 °C
(32 °F to 212 °F)

Note:

- The output range setting must not be less than 10 % of the measuring range: $A ! H_ - A ! L_ \geq 10\%$
- If the range is set too low, the analogue value output may have grades.

5.8.3 Analogue output x: Signal type assignment

The analogue output can be defined as a voltage or current output with different value ranges. This is configured in menu:



The options are:



4 mA to 20 mA



2 V to 10 V




0 V to 10 V



0 V to 5 V

5.8.4 Analogue output x: Testing the analogue output

The analogue output can be tested. The highest, mean and lowest analogue value can be output successively. This is configured in menu:



The options are:



Normal mode



Highest analogue value output



Mean analogue value output



Lowest analogue value output




Note:

- After completing the test, set the function to normal mode **noP**.

5.9 Diagnostic options

The device is able to log events for a switching output. The LED lighting up is considered an event. The logging of switching procedures therefore depends on how the LED switching function is configured.

The configuration and analysis can be carried out here.



NOTICE



Only one switching output can be logged. The switching output to be logged is configured in menu item **Set Journal Out** (**5Jou**).

- Press the ▼ key to open the main menu.
- Select menu item **d, R** with the ▼ and ▲ keys.




From here you will be able to access various diagnostic values and measurement monitoring logs.

- Open the menu with the ► key.
You can now change or view the diagnostic settings.

5.9.1 View logbook

The last 6 events for the switching output being logged can be viewed here and all entries deleted:



The journal entries will be displayed as:

- Most recent event **Jor 1** occurred x hours (h) / days (d) ago,
- Events 2 to 5 occurred x hours / days ago,
- The oldest event **Jor 6** occurred x hours / days ago,
- Delete function (---)

Example:


Jor 1 ⇔ 13h, key ▼
 Jor 2 ⇔ 24h, key ▼, ▲
 Jor 3 ⇔ 6.1h, key ▼, ▲
 Jor 4 ⇔ 82h, key ▼, ▲
 Jor 5 ⇔ non 8, key ▼, ▲
 Jor 6 ⇔ non 8, key ▼, ▲
 ---, key ▲, ► = delete

* not yet populated, only 4 events have occurred



The information displayed will alternate between the index and time for entry x, e.g. *Jor 1* $\Leftrightarrow$ *1.4h* for the most recent event 1.4 hours ago.

Press the $\blacktriangleright$ key to return to the submenu or use $\blacktriangledown$, $\blacktriangle$ to select the next journal entry.

Confirming the information  with the $\blacktriangleright$ key will delete the list of events and return to the submenu.

Note:

- If no events have been logged, the display will alternate between *Jor X* and *nan*.

5.9.2 Maximum and minimum temperature

Used to view or delete the saved maximum and minimum temperature:




The journal entries will be displayed as:

- Maximum temperature,
- occurred x hours / days ago,
- Minimum temperature,
- occurred x hours / days ago,
- Delete function

Example:

72 C, key $\blacktriangledown$
8.4h, key $\blacktriangledown$, $\blacktriangle$
22 C, key $\blacktriangledown$, $\blacktriangle$
2.1h, key $\blacktriangledown$, $\blacktriangle$
---, key $\blacktriangle$; $\blacktriangleright$ = delete




Press the $\blacktriangleright$ key to return to the submenu or use $\blacktriangledown$, $\blacktriangle$ to select the next Journal entry.

Confirming the information  with the $\blacktriangleright$ key will delete the list of events and return to the submenu.

Menu order:
 Max. value,
 time
 min. value
 time
 delete (reset)

5.9.3 Define switching output to log

Used to select the switching output to be logged. Only one switching output can be logged.



Switching output logging.

Options:
out 1 to *out X*


NOTICE



Values are backed up from volatile to non-volatile memory approx. every three hours.

5.9.4 Delay for storing the Min/Max Temperature

A delay time for saving the minimum and maximum temperature can be set to record reliable values when temperatures fluctuate. Here, enter the time span in seconds during which the signal must be continuously present before the temperature is logged.



- Use the ▶ key to open the list of values.
- Set the value with the ▼ and ▲ keys and use the ▶ key to confirm (e.g. 5 (seconds)).
The device will return to the submenu.

Setting range:
0...100 seconds

6 Cleaning and Maintenance

This device is maintenance-free.

The method for cleaning the devices must be adapted to the IP protection class of the devices. Do not use cleaners which could damage the device materials.

7 Service and repair

This chapter contains information on troubleshooting and correction should an error occur during operation.

Repairs to the unit must be performed by Bühler authorised personnel.

Please contact our Service Department with any questions:

Tel.: +49-(0)2102-498955 or your agent

If the equipment is not functioning properly after correcting any malfunctions and switching on the power, it must be inspected by the manufacturer. Please send the equipment inside suitable packaging to:

Bühler Technologies GmbH

- Reparatur/Service -

Harkortstraße 29

40880 Ratingen

Germany

Please also attach the completed and signed RMA decontamination statement to the packaging. We will otherwise be unable to process your repair order.

You will find the form in the appendix of these instructions, or simply request it by e-mail:

service@buehler-technologies.com.

7.1 Troubleshooting

Problem / Malfunction	Possible cause	Action
No display	– No supply voltage	– Check cable and replace, if necessary
Error messages on the display:		
Alternating between Err and Exxx: e.g.  ⇔ 		
 Error 001	– Ambient temperature too low	– Maintain limits
 Error 002	– Ambient temperature too high	– Maintain limits
 Error 004	– Pt100 defective (short-circuit)	– Send device in for repair
 Error 008	– Pt100 defective (cable break)	– Send device in for repair
 Error 1024	– Internal error	– Please contact customer service

Possible errors

Problem / Malfunction	Possible cause	Action
Switching output not triggering when exceeding limits	– Switching output configured incorrectly	– In submenu LOUX : “Test Switching Output” to ensure normal mode
	– Switching output defect	– In submenu LOUX : “Test Switching Output” to test the desired switching output
Switching output constantly switching	– Switching output configured incorrectly	– In submenu LOUX : “Test Switching Output” to ensure normal mode
	– Switching output defect	– In submenu LOUX : “Test Switching Output” to test the desired switching output
The analogue doesn't receive the full/correct output current	– Wrong signal type set	– In submenu ROUX : Check and if necessary set the correct signal type (current/voltage output)
	– Load too high (current output)	– Reduce load to permissible value
Analogue output doesn't change the output signal when the input signal changes	– Analogue output configured incorrectly	– In submenu LOUX : „Test Analogue Output“ to ensure normal mode

7.2 Spare parts and accessories

Accessories

Item no. 4-pin	Item no. 8-pin	Description
9144 05 0010	9144 05 0048	Connecting cable M12x1, 1.5 m, angular coupling and straight plug
9144 05 0046	9144 05 0049	Connecting cable M12x1, 3.0 m, angular coupling and straight plug
9144 05 0047	9144 05 0033	Connecting cable M12x1, 5.0 m, angular coupling and strands

8 Disposal

The applicable national laws must be observed when disposing of the products. Disposal must not result in a danger to health and environment.

The crossed out wheelie bin symbol on Bühler Technologies GmbH electrical and electronic products indicates special disposal notices within the European Union (EU).



The crossed out wheelie bin symbol indicates the electric and electronic products bearing the symbol must be disposed of separate from household waste. They must be properly disposed of as waste electrical and electronic equipment.

Bühler Technologies GmbH will gladly dispose of your device bearing this mark. Please send your device to the address below for this purpose.



We are obligated by law to protect our employees from hazards posed by contaminated devices. Therefore please understand that we can only dispose of your waste equipment if the device is free from any aggressive, corrosive or other operating fluids dangerous to health or environment. **Please complete the "RMA Form and Decontamination Statement", available on our website, for every waste electrical and electronic equipment. The form must be applied to the packaging so it is visible from the outside.**

Please return waste electrical and electronic equipment to the following address:

Bühler Technologies GmbH
WEEE
Harkortstr. 29
40880 Ratingen
Germany

Please also observe data protection regulations and remember you are personally responsible for the returned waste equipment not bearing any personal data. Therefore please be sure to delete your personal data before returning your waste equipment.

9 Appendices

9.1 Technical Data NT MD

Version	MS
Operating pressure:	max. 1 bar
Operating temperature:	-20 °C to +80 °C
Float:	SK 161
Min. fluid density:	0.80 kg/dm ³
Lengths:	280, 370, 500 mm (standard) variable to max. 1000 mm
Weight at L=280 mm:	approx. 500 g

Material

Float:	NBR
Immersion tube:	brass
G3/4 connection:	brass

Level switching output

K8

Number max.:	2 (not adjustable)
Function:	NO/NC*
Max. voltage:	30 V DC
Max. switching current:	0.5 A
Max. contact load:	10 VA
Min. contact spacing:	40 mm

*NO = falling open / NC = falling close


Temperature display electronics

Display:	4 character 7 segment LED
Operation:	via 3 keys
Memory:	min./max. data memory
Starting current input:	approx. 100 mA for 100 ms
Current input during operation:	approx. 50 mA (without current- and switching outputs)
Supply voltage (U _B):	10–30 V DC (nominal voltage 24 V DC)
Ambient temperature:	-20 °C to +70 °C
Temperature display units:	°C/°F
Display range:	-20 °C to +120 °C
Alarm setting range:	0 °C to 100 °C
Display accuracy:	± 1 % from end value
Measuring principle:	Pt 100 Class B, DIN EN 60751, resolution 0.5 °C


Adapter

OV:	adapter to oval flange incl. seal and locking nut
G1:	adapter G3/4 to G1


Dimensions

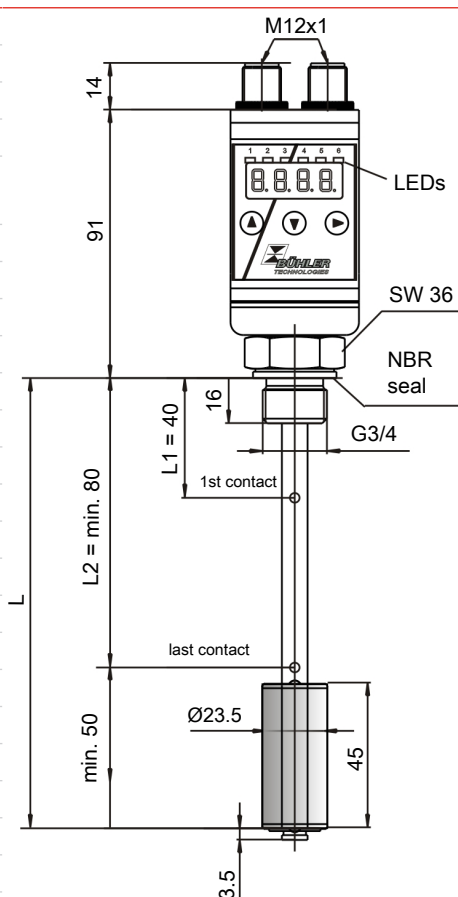

Housing swivels 270°

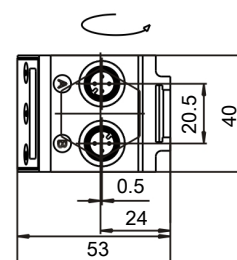

Oval flange

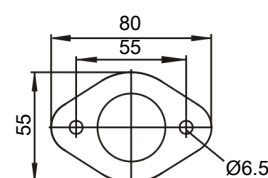

9.2 Temperature outputs NT MD










Choose from the following temperature outputs:

	2T	1T-KT	4T
Plug (base)	2 x M12 – 4-pin	2 x M12 – 4-pin	1 x M12 – 4-pin 1 x M12 – 8-pin
Switching outputs	2 x freely programmable*	1 x freely programmable*	4 x freely programmable*
Alarm memory	1 switching output assignable to alarm logbook	1 switching output assignable to alarm logbook	1 switching output assignable to alarm logbook
max. switching current**	0.5 A per output continuous short-circuit protected	0.5 A per output continuous short-circuit protected	0.5 A per output continuous short-circuit protected
Contact load	max. 1 A total	max. 1 A total	max. 1 A total
Analog output		1 x 4 – 20 mA, 2 - 10 V DC, 0 - 10 V DC, 0 - 5 V DC	
Max. burden Ω as current output		$= (U_B - 8 \text{ V}) / 0.02 \text{ A}$	
Min. input load as voltage output		10 k Ω	

*Switching output 1 + 2 also programmable as frequency output 1-100 Hz.

**Output 1 max. 0.2 A.

9.3 Standard pin assignment NT MD

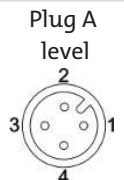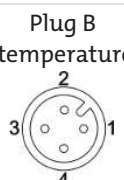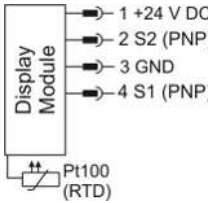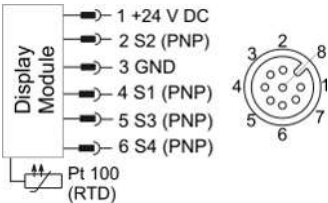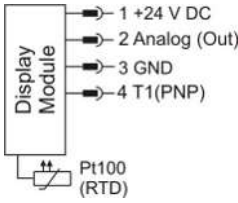Standard pin assignment	2T	4T	1T-KT
 Plug A level  Plug B temperature 	Level contact(s) 2x temperature output 	Level contact(s) 4x temperature output 	Level contact(s) 1x temperature output 1x analogue output 
			

9.4 Current settings

Switching outputs	Basic Settings	Diagnostics
<i>SP1 / rP1</i>	<i>ou1</i>	<i>5d0u</i>
<i>dS1 / dr1 / ou1</i>	<i>ēu1</i>	<i>dē111</i>
<i>SP2 / rP2</i>	<i>ou2</i>	
<i>dS2 / dr2 / ou2</i>	<i>ēu2</i>	
<i>SP3 / rP3</i>	<i>ou3</i>	
<i>dS3 / dr3 / ou3</i>	<i>ēu3</i>	
<i>SP4 / rP4</i>	<i>ou4</i>	
<i>dS4 / dr4 / ou4</i>	<i>ēu4</i>	
	<i>d1.5</i>	
	<i>Loc</i>	
Analogue outputs	<i>ēc1*</i>	
<i>R1H1 / R1Lo / Rou1</i>	<i>ēc1*</i>	
<i>R2H1 / R2Lo / Rou2</i>		

*for wall-mounting only

Date: _____

Signature: _____

9.5 Display ranges

Name	Menu/Unit	Display	Range from/ with unit	Range to/ with unit
Temperature				
°C	<i>ē</i>	<i>ē</i>	-100 °C	999 °C
°F	<i>F</i>	<i>F</i>	-100 °F	999 °F
Without				
none	<i>non</i>	none	-1000	9999
none	<i>non1</i>	none	-100.0	999.9
none	<i>non2</i>	none	-10.00	99.99

9.6 Display resolution

Range x = |Max - Min|

°C, °F (up to 1 decimal)		none (<i>non1</i>) (1 fixed-point number)	
Range x	Resolution	Range x	Resolution
x < 50	0.1	x < 50	0.1
50 ≤ x < 100	0.2	50 ≤ x < 100	0.2
100 ≤ x < 200	0.5	100 ≤ x < 200	0.5
200 ≤ x < 500	1	200 ≤ x < 500	1
500 ≤ x < 1000	2	500 ≤ x < 1000	2
1000 ≤ x	5	1000 ≤ x	5


none (*non2*)
(2 fixed-point numbers)

Range x	Resolution
$x < 5$	0.01
$5 \leq x < 10$	0.02
$10 \leq x < 20$	0.05
$20 \leq x < 50$	0.1
$50 \leq x < 100$	0.2
$100 \leq x$	0.5

Example no unit: Min = 100, Max = 1500 -> $x = 1500 - 100 = 1400$ -> Resolution = 5

Example Temperature: Min = 0°C, Max = 100°C -> $x = 100^\circ\text{C} - 0^\circ\text{C} = 100^\circ\text{C}$ -> Resolution = 0.5°C

9.7 Menu Sequence Overview

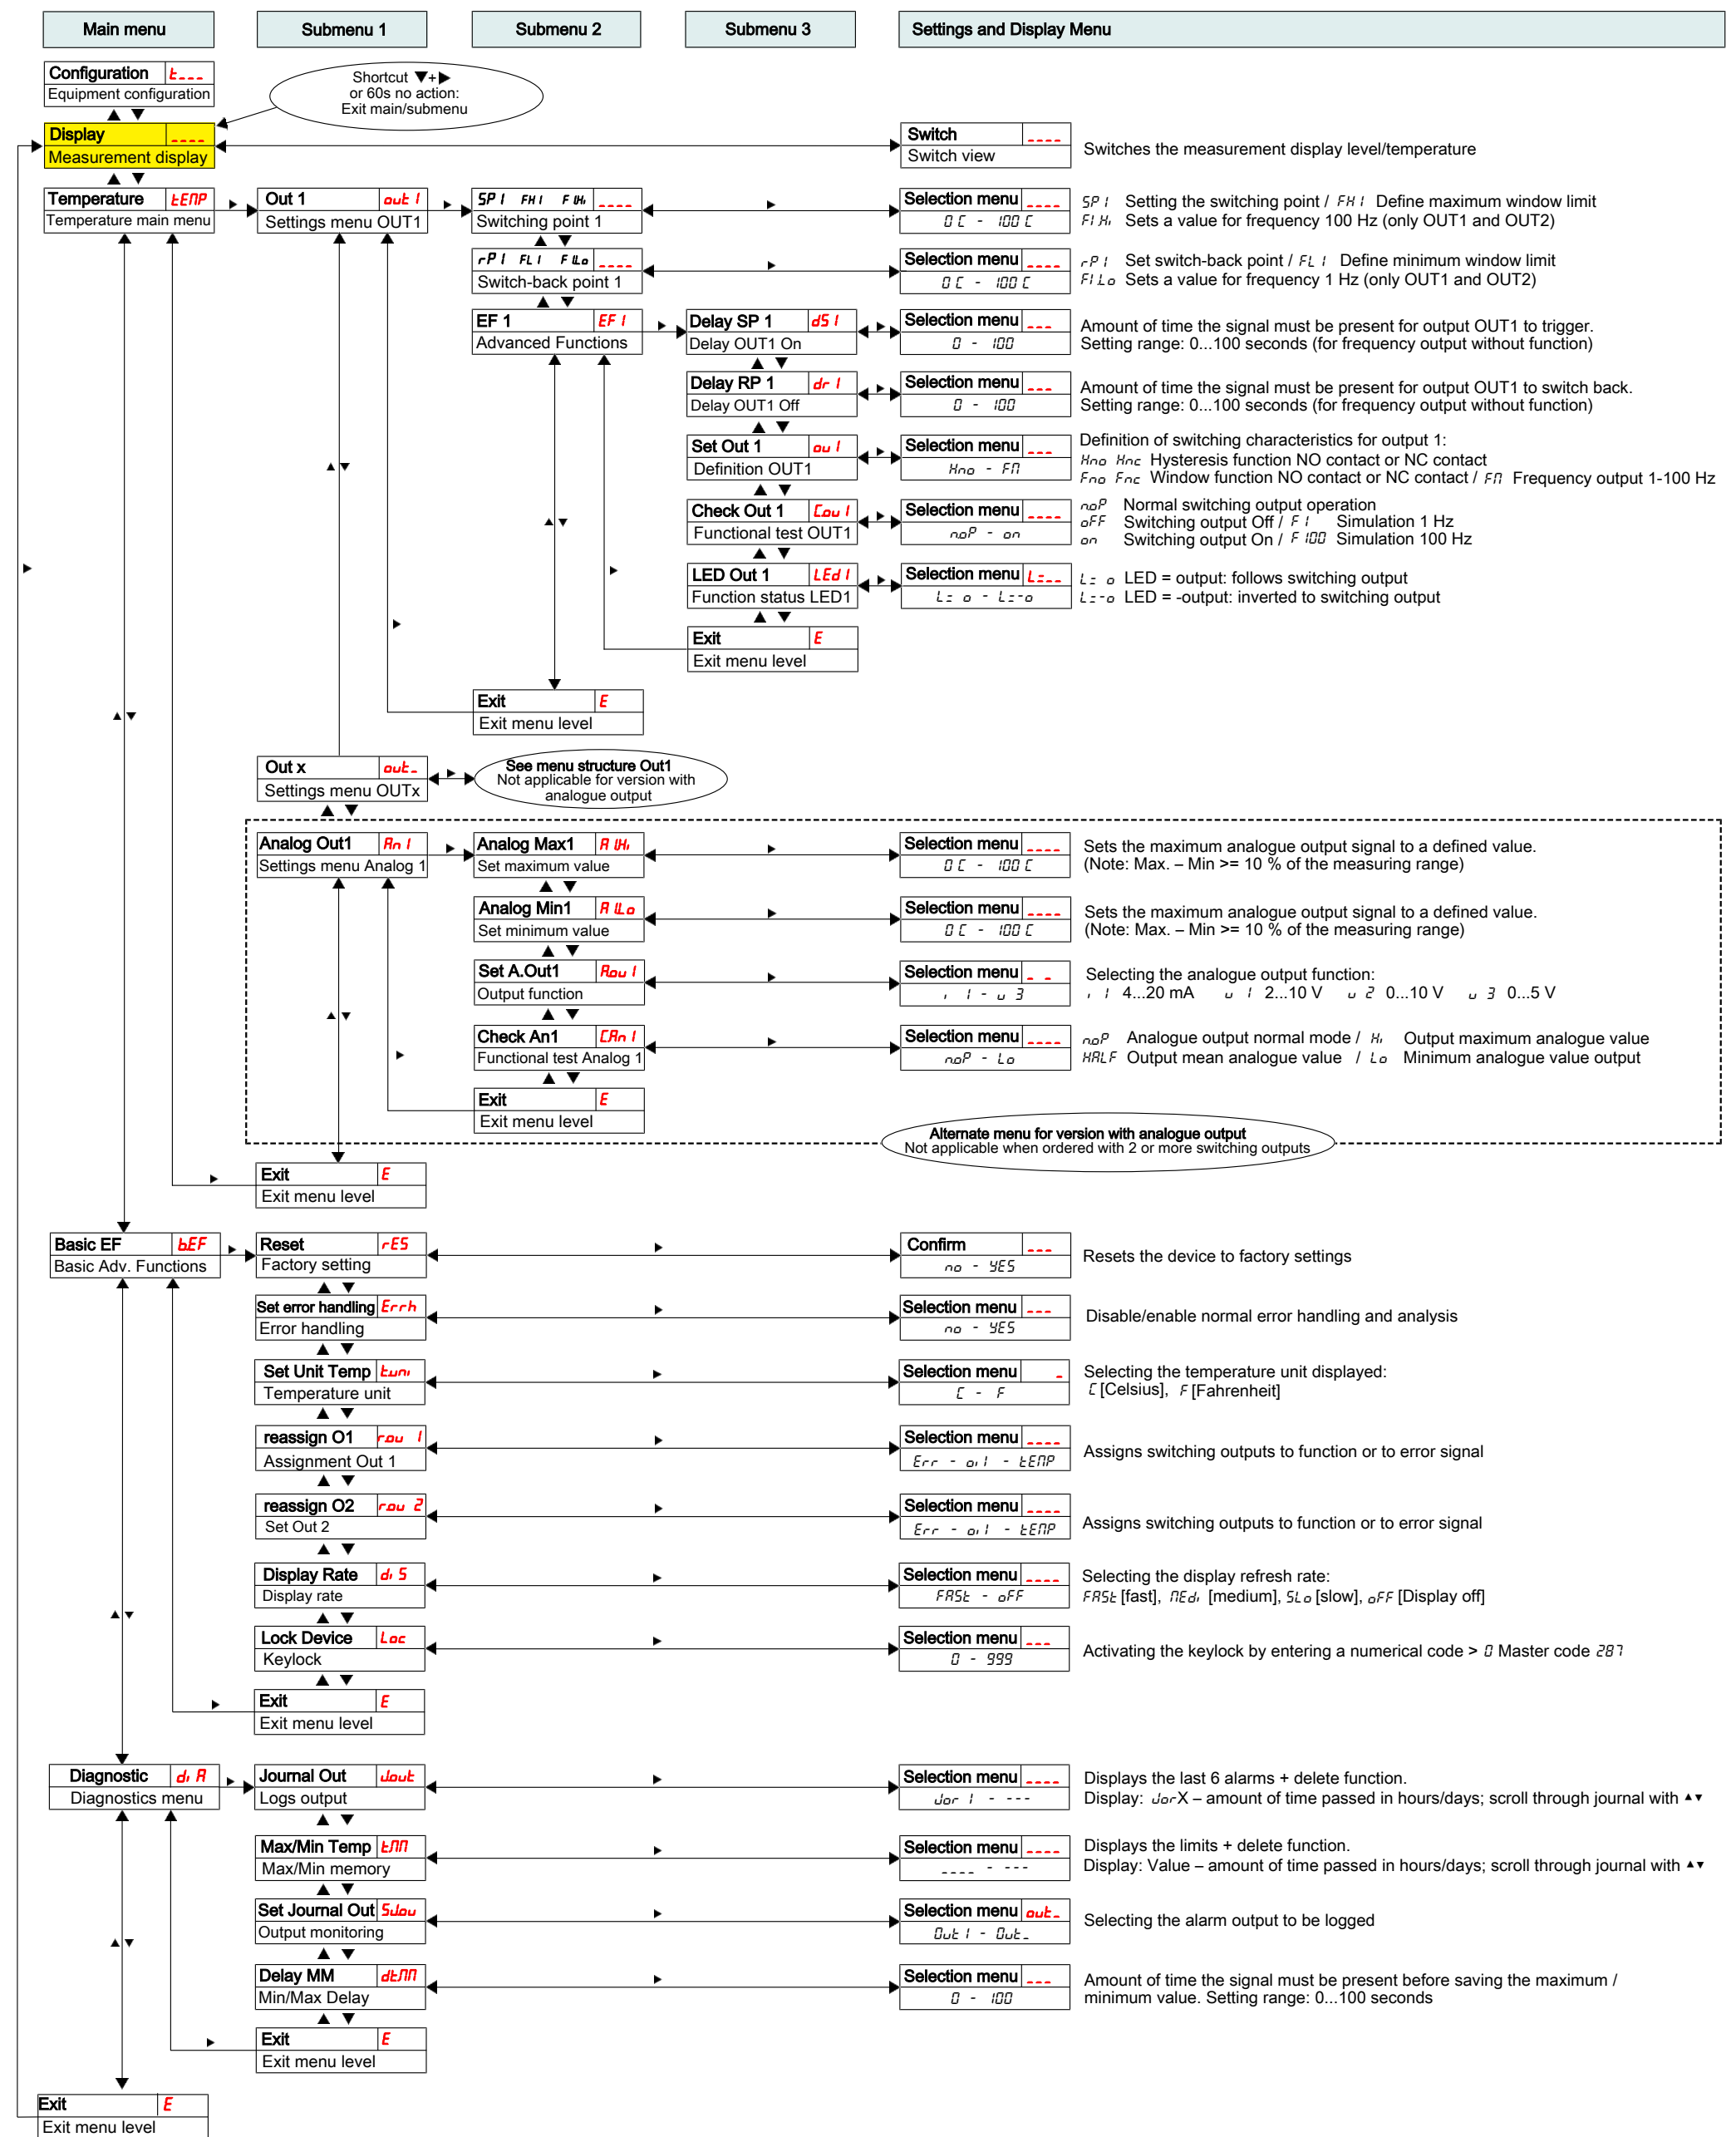

10 Attached documents

- Declaration of conformity: KX100020
- RMA - Decontamination Statement

EU-Konformitätserklärung
EU-declaration of conformity



Hiermit erklärt Bühler Technologies GmbH,
dass die nachfolgenden Produkte den
wesentlichen Anforderungen der Richtlinie

*Herewith declares Bühler Technologies GmbH
that the following products correspond to the
essential requirements of Directive*

2014/30/EU
(Elektromagnetische Verträglichkeit / *electromagnetic compatibility*)

in ihrer aktuellen Fassung entsprechen.

in its actual version.

Produkt / products: Niveauschalter und –geber / *Level switches and gauges*

Typ / type: Nivotemp 61D, 63, 64, 64D, 67XP, MD, M-XP

Nivovent 71D, 73, 74, 74D, 77XP, 84, 85, 86

Die Betriebsmittel dienen zur Überwachung des Füllstandes und der Temperatur in Fluidsystemen.
The equipment is designed for monitoring level and temperature in fluid systems.

Das oben beschriebene Produkt der Erklärung erfüllt die einschlägigen
Harmonisierungsrechtsvorschriften der Union:
*The object of the declaration described above is in conformity with the relevant Union harmonisation
legislation:*

EN 61326-1:2013

Die alleinige Verantwortung für die Ausstellung dieser Konformitätserklärung trägt der Hersteller.
This declaration of conformity is issued under the sole responsibility of the manufacturer.

Dokumentationsverantwortlicher für diese Konformitätserklärung ist Herr Stefan Eschweiler mit
Anschrift am Firmensitz.

*The person authorised to compile the technical file is Mr. Stefan Eschweiler located at the company's
address.*

Ratingen, den 17.02.2023

A handwritten signature in blue ink, appearing to read 'Stefan Eschweiler'.

Stefan Eschweiler
Geschäftsführer – *Managing Director*

A handwritten signature in blue ink, appearing to read 'Frank Pospiech'.

Frank Pospiech
Geschäftsführer – *Managing Director*

UK Declaration of Conformity



The manufacturer Bühler Technologies GmbH declares, under the sole responsibility, that the product complies with the requirements of the following UK legislation:

Electromagnetic Compatibility Regulations 2016

Product: Level switches and gauges
Types: Nivotemp 61D, 63, 64, 64D, 67XP, MD, M-XP
Nivovent 71D, 73, 74, 74D, 77XP, 84, 85, 86

The equipment is designed for monitoring level and temperature in fluid systems.

The object of the declaration described above is in conformity with the relevant designated standards:

EN 61326-1:2013

Ratingen in Germany, 17.02.2023

A handwritten signature in blue ink, appearing to read 'Stefan Eschweiler', written over a horizontal line.

Stefan Eschweiler
Managing Director

A handwritten signature in blue ink, appearing to read 'Frank Pospiech', written over a horizontal line.

Frank Pospiech
Managing Director

RMA-Formular und Erklärung über Dekontaminierung

RMA-Form and explanation for decontamination



RMA-Nr./ RMA-No.

Die RMA-Nr. bekommen Sie von Ihrem Ansprechpartner im Vertrieb oder Service. Bei Rücksendung eines Altgeräts zur Entsorgung tragen Sie bitte in das Feld der RMA-Nr. "WEEE" ein./ You may obtain the RMA number from your sales or service representative. When returning an old appliance for disposal, please enter "WEEE" in the RMA number box.

Zu diesem Rücksendeschein gehört eine Dekontaminierungserklärung. Die gesetzlichen Vorschriften schreiben vor, dass Sie uns diese Dekontaminierungserklärung ausgefüllt und unterschrieben zurücksenden müssen. Bitte füllen Sie auch diese im Sinne der Gesundheit unserer Mitarbeiter vollständig aus./ This return form includes a decontamination statement. The law requires you to submit this completed and signed decontamination statement to us. Please complete the entire form, also in the interest of our employee health.

Firma/ Company

Firma/ Company

Straße/ Street

PLZ, Ort/ Zip, City

Land/ Country

Gerät/ Device

Anzahl/ Quantity

Auftragsnr./ Order No.

Ansprechpartner/ Person in charge

Name/ Name

Abt./ Dept.

Tel./ Phone

E-Mail

Serien-Nr./ Serial No.

Artikel-Nr./ Item No.

Grund der Rücksendung/ Reason for return

- ☐ Kalibrierung/ Calibration ☐ Modifikation/ Modification
☐ Reklamation/ Claim ☐ Reparatur/ Repair
☐ Elektroaltgerät/ Waste Electrical & Electronic Equipment (WEEE)
☐ andere/ other

bitte spezifizieren/ please specify

Ist das Gerät möglicherweise kontaminiert?/ Could the equipment be contaminated?

- ☐ Nein, da das Gerät nicht mit gesundheitsgefährdenden Stoffen betrieben wurde./ No, because the device was not operated with hazardous substances.
☐ Nein, da das Gerät ordnungsgemäß gereinigt und dekontaminiert wurde./ No, because the device has been properly cleaned and decontaminated.
☐ Ja, kontaminiert mit:/ Yes, contaminated with:



☐
explosiv/
explosive



☐
entzündlich/
flammable



☐
brandfördernd/
oxidizing



☐
komprimierte
Gase/
compressed
gases



☐
ätzend/
caustic



☐
giftig,
Lebensgefahr/
poisonous, risk
of death



☐
gesundheitsge-
fährdend/
harmful to
health



☐
gesund-
heitsschädlich/
health hazard



☐
umweltge-
fährdend/
environmental
hazard

Bitte Sicherheitsdatenblatt beilegen! / Please enclose safety data sheet!

Das Gerät wurde gespült mit:/ The equipment was purged with:

Diese Erklärung wurde korrekt und vollständig ausgefüllt und von einer dazu befugten Person unterschrieben. Der Versand der (dekontaminierten) Geräte und Komponenten erfolgt gemäß den gesetzlichen Bestimmungen.

This declaration has been filled out correctly and completely, and signed by an authorized person. The dispatch of the (decontaminated) devices and components takes place according to the legal regulations.

Falls die Ware nicht gereinigt, also kontaminiert bei uns eintrifft, muss die Firma Bühler sich vorbehalten, diese durch einen externen Dienstleister reinigen zu lassen und Ihnen dies in Rechnung zu stellen.

Should the goods not arrive clean, but contaminated, Bühler reserves the right, to commission an external service provider to clean the goods and invoice it to your account.

Firmenstempel/ Company Sign

Datum/ Date

rechtsverbindliche Unterschrift/ Legally binding signature



Vermeiden von Veränderung und Beschädigung der einzusendenden Baugruppe

Die Analyse defekter Baugruppen ist ein wesentlicher Bestandteil der Qualitätssicherung der Firma Bühler Technologies GmbH. Um eine aussagekräftige Analyse zu gewährleisten muss die Ware möglichst unverändert untersucht werden. Es dürfen keine Veränderungen oder weitere Beschädigungen auftreten, die Ursachen verdecken oder eine Analyse unmöglich machen.

Umgang mit elektrostatisch sensiblen Baugruppen

Bei elektronischen Baugruppen kann es sich um elektrostatisch sensible Baugruppen handeln. Es ist darauf zu achten, diese Baugruppen ESD-gerecht zu behandeln. Nach Möglichkeit sollten die Baugruppen an einem ESD-gerechten Arbeitsplatz getauscht werden. Ist dies nicht möglich sollten ESD-gerechte Maßnahmen beim Austausch getroffen werden. Der Transport darf nur in ESD-gerechten Behältnissen durchgeführt werden. Die Verpackung der Baugruppen muss ESD-konform sein. Verwenden Sie nach Möglichkeit die Verpackung des Ersatzteils oder wählen Sie selber eine ESD-gerechte Verpackung.

Einbau von Ersatzteilen

Beachten Sie beim Einbau des Ersatzteils die gleichen Vorgaben wie oben beschrieben. Achten Sie auf die ordnungsgemäße Montage des Bauteils und aller Komponenten. Versetzen Sie vor der Inbetriebnahme die Verkabelung wieder in den ursprünglichen Zustand. Fragen Sie im Zweifel beim Hersteller nach weiteren Informationen.

Einsenden von Elektroaltgeräten zur Entsorgung

Wollen Sie ein von Bühler Technologies GmbH stammendes Elektroprodukt zur fachgerechten Entsorgung einsenden, dann tragen Sie bitte in das Feld der RMA-Nr. „WEEE“ ein. Legen Sie dem Altgerät die vollständig ausgefüllte Dekontaminierungserklärung für den Transport von außen sichtbar bei. Weitere Informationen zur Entsorgung von Elektroaltgeräten finden Sie auf der Webseite unseres Unternehmens.

Avoiding alterations and damage to the components to be returned

Analysing defective assemblies is an essential part of quality assurance at Bühler Technologies GmbH. To ensure conclusive analysis the goods must be inspected unaltered, if possible. Modifications or other damages which may hide the cause or render it impossible to analyse are prohibited.

Handling electrostatically conductive components

Electronic assemblies may be sensitive to static electricity. Be sure to handle these assemblies in an ESD-safe manner. Where possible, the assemblies should be replaced in an ESD-safe location. If unable to do so, take ESD-safe precautions when replacing these. Must be transported in ESD-safe containers. The packaging of the assemblies must be ESD-safe. If possible, use the packaging of the spare part or use ESD-safe packaging.

Fitting of spare parts

Observe the above specifications when installing the spare part. Ensure the part and all components are properly installed. Return the cables to the original state before putting into service. When in doubt, contact the manufacturer for additional information.

Returning old electrical appliances for disposal

If you wish to return an electrical product from Bühler Technologies GmbH for proper disposal, please enter "WEEE" in the RMA number box. Please attach the fully completed decontamination declaration form for transport to the old appliance so that it is visible from the outside. You can find more information on the disposal of old electrical appliances on our company's website.

