


Gas Analysis







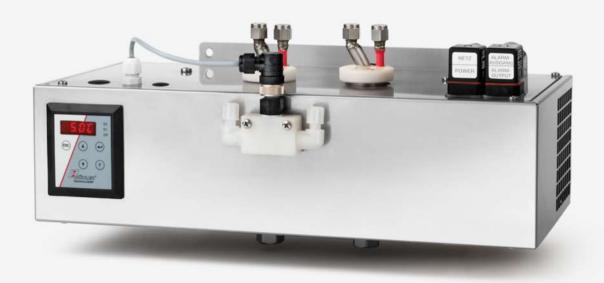





Sample gas cooler TC-Double X2

In the chemical industry, petrochemistry or biochemistry, reliable process control relies on prompt and exact determination of the operating parameters.

Here, gas analysis is the key for safe and efficient control of process flows, environmental protection and quality assurance. This benefits controlling flue gas emission in power stations or exhaust gas analysis in automotive engineering, as well as the efficient control of air separators or sterile production and packaging in the food industry.

Many of the analysis processes used in these fields require extracting the sample gas. This inevitably also extracts process-related contamination such as particles or moisture. These in turn can impact the measurement results or damage the measuring cells. The sample gas must therefore be conditioned before entering the analyser.

Many applications require equipment which can be used in explosive areas. This is where the TC-Double X2 series provides solutions for Zone 2 or Class I, Division 2.

ATEX and IECEx Zone 2 approval

FM C-US approval for Class I, Division 2

One gas path

Heat exchanger made from stainless steel, Duran glass or PVDF

Adjustable outlet dew point and alarm thresholds

Rated power 270/310 kJ/h, 40 °C/60 °C version

Max. ambient temperature 60 °C

Dew point stability 0.1 °C

Status display and output

Cooling block temperatures display

Moisture detector connection, analog output, filter, and peristaltic pump optional



Overview

The TC-Double X2 series was designed specifically for high cooling capacities, high ambient temperatures and to cool in two cycles to minimise wash out effects.

Any other use of this cooler is determined by the type of built-in passive pre-cooling, i.e. the first cooling level is not controlled electronically.

The Peltier coolers are distinguished according to cooling capacity/operating temperature. This classification is reflected in the type designation. The exact item number of the model defined by you is determined by the model code in the category ordering information.

| Application | Standard a | pplications |
|-----------------------------|-------------------|-------------------|
| Operating temperature | 40 °C | 50 °C |
| 2 heat exchangers in series | TC-Double 6111 X2 | TC-Double 6112 X2 |

Additional components which every conditioning system should feature can optionally be integrated:

- Peristaltic pump for condensate separation,
- Filter,
- Moisture detector,
- Sample gas pump.

This allows for various configurations of cooler and options. Here the approach is to simplify creating a complete system in a cost-efficient way through pre-installed components with hoses connected. We further paid attention to easy access to wear parts and consumables.

Description of functions

The cooler is controlled by a microprocessor. With the factory preset the control already incorporates the various characteristics of the built-in heat exchangers.

The programmable display shows the block temperatures in the selected display unit (°C / °F) (factory preset °C). Application-specific settings can easily be configured guided by the menu, using the 5 buttons. This applies to the outlet dew point setting on one hand and to the low and excess temperature warning thresholds on the other hand. These are set relative to the outlet dew point τ_a setting.

For the low temperature the range is τ_a -1 to - 3 K (at a minimum 1 °C cooling block temperature), for the excess temperature the range is τ_a +1 to +7 K. The factory presets for both values are 3 K.

The flashing display and the status relays indicate the conditions are below or above the configured warning range (e.g. after switching on).

The status output can e.g. be used to control the sample gas pump to allow for the gas flow to only be switched on once the permissible cooling range has been reached or shut off the pump in the event of a moisture detector alarm.

The separated condensate can be drained via the add-on peristaltic pump.

In addition, a fine filter can be attached to the cooler, which an optional moisture detector can be integrated into. The glass dome allows the dirt level of the filter element to easily be determined. The moisture detector can also be installed separately and is generally easy to remove. This may be required if water enters the cooler due to a malfunction and the peristaltic pump can no longer remove it.

A gas pump can be attached to the TC-Double and controlled. These are also available with bypass valve to regulate the flow rate.

Gas Cooler Technical Data

| Gas Cooler Technical Data | | | | |
|--|--|----------------|--|----------------|
| Ready for operation | after max. 10 minutes | | | |
| Ambient temperature | 5 °C to 60 °C | | | |
| Gas output dew temperature, preset: adjustable: | 5 °C 2 °C20 °C | | | |
| IP rating | IP 20 | | | |
| Housing | Stainless steel, brushed | | | |
| Packaging dimensions | approx. 427 x 300 x 293 mm | | | |
| Weight incl. heat exchanger | approx. 11.5 kg approx. 15 kg at full expansion stage | | | |
| Electrical data | Unit without add-on | | Unit with add-on (peristaltic pump + gas pump) | |
| | 230 V AC | 115 V AC | 230 V AC | 115 V AC |
| | +5/-10% | +5/-10% | +-5% | +-5% |
| | 50/60 Hz | 50/60 Hz | 50 Hz | 60 Hz |
| | 1.6 A | 3.2 A | 2.1 A | 4.1 A |
| | 278 W / 350 VA | 296 W / 370 VA | 390 W / 487 VA | 377 W / 472 VA |
| Recommended fuse (characteristic: delayed action) | 2.5 A | 4 A | 2.5 A | 5 A |
| Status output switching capacity | max. 250 V AC, 150 V DC 2 A, 50 VA, potential-free | | | |
| Electrical Connections | Plug per EN 175301-803 | | | |
| Gas connections | Heat exchange see table "Heat Exchanger Overview" Filter, moisture detector adapter, gas pump, G1/4 or NPT 1/4" or metric/US tube or pipe | | | |
| Parts in contact with media Filter: Moisture detector: Heat exchanger: Peristaltic pump: Tubing: Markings: | see "Technical Data - Options" see "Technical Data - Options" see table "Heat Exchanger Overview" see "Technical Data - Options" PTFE/Viton FM18ATEX0012X: II 3 G Ex ec nC IIC T4 Gc IECEx FMG 18.0005X: Ex ec nC IIC T4 Gc FM18US0021X/FM18CA0010X: CL I DIV 2 GP ABCD RU C-DE.HA65.B.00608/20 | | | |

Technical Data - Options

| Analogue Output Cooler Temperature Technical Data | |
|---|---|
| Signal | 4-20 mA or 2-10 V |
| | corresponds to -20 °C to +60 °C cooler temperature |
| Connection | M12x1 plug, DIN EN 61076-2-101 |
| Technical Data FF-3-N Moisture Detector | |
| Ambient temperature | 3 °C to 50 °C |
| max. operating pressure with FF-3-N | 2 bar |
| Material | PVDF, PTFE, epoxy resin, stainless steel 1.4571, 1.4576 |
| Technical Data peristaltic pump CPdouble X2 | |
| Ambient temperature | 0 °C to 50 °C |
| Flow rate | 0.3 L/h (50 Hz) / 0.36 L/h (60 Hz) with standard hose |
| Vacuum inlet | max. 0.8 bar |
| Pressure inlet | max.1bar |
| Outlet pressure | 1 bar |
| Hose | 4 x 1.6 mm |
| Degree of protection | IP 44 |
| Materials | |
| Hose: | Norprene (standard), Marprene, Fluran |
| Connections: | PVDF |
| Technical Data Sample Gas Pump P1.3 | |
| Ambient temperature | 0 °C to 50 °C |
| Operating pressure | max. 1,3 bar abs. |
| Nominal outlet | 280 l/h (at p = 1 bar abs.) |
| Materials in contact with media vary by configuration | PTFE, PVDF, 1.4571, 1.4401, Viton |
| AGF-PV-30-F2 Filter Technical Data | |
| Ambient temperature | 3 °C to 100 °C |
| max. operating pressure with filter | 4 bar |
| Filter surface | 60 cm ² |
| Filter fineness | 2 μm |
| Dead volume | 57 ml |
| Materials | |
| Filter: | PVDF, Duran glass (parts in contact with media) |

Viton

sintered PTFE


Bühler Technologies GmbH

Seal:


Filter element:


Performance curves

The TC-Double 6111 (X2) is designed for ambient temperatures of up to 40 $^{\circ}$ C. The cooling capacity is adequate up to this temperature. The TC-Double 6112 (X2) on the other hand can be used in higher temperatures up to nominal 60 $^{\circ}$ C. Please note the available cooling capacity.





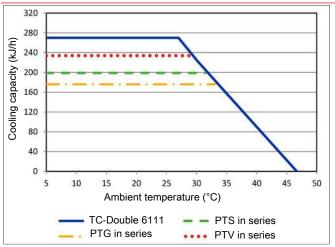

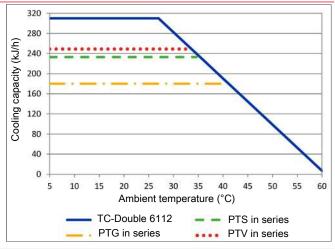

Note: The limit curves for the heat exchangers exchanger apply to a dew point of 50 °C.

Heat exchanger description

The energy content of the sample gas and the required cooling capacity of the gas cooler is determined by three parameters: gas temperature ϑ_G , dew point τ_e (moisture content) and volume flow v. The outlet dew point rises with increasing energy content of the gas. The following limits for the maximum flow are specified for a standard operating point of τ_e = 50 °C and ϑ_G = 70 °C. Indicated is the maximum flow v_{max} in NI/h of cooled air, so after moisture has condensed. Values may differ for other dew points and gas inlet temperatures. However, the physical facts are so vast we decided to omit the illustration. Please contact our experts for clarification or refer to our design program.

Heat exchanger overview

| Heat exchanger | 2x PTS 2x PTS-I ²⁾ | 2x PTG 2x PTG-I ²⁾ | 2x PTV 2x PTV-I ²⁾ |
|--|----------------------------------|----------------------------------|----------------------------------|
| Materials in contact with media | Stainless steel | Glass PTFE | PVDF |
| Flow rate $v_{max}^{1)}$ | 450 Nl/h | 250 Nl/h | 250 Nl/h |
| Inlet dew point T _{e,max} 1) | 70 °C | 70 °C | 70 °C |
| Gas inlet temperature $\vartheta_{\sf G,max}^{ \ \ 1)}$ | 180 °C | 140 °C | 140 °C |
| Max. Cooling capacity Q _{max} | 310 kJ/h | 215 kJ/h | 295 kJ/h |
| Gas pressure p _{max} | 3 bar 4) | 3 bar | 2 bar |
| Pressure drop Δp (v=150 L/h) total | 20 mbar | 20 mbar | 20 mbar |
| Dead volume V _{tot} total | 59 ml | 59 ml | 115 ml |
| Gas connections (metric) | 6 mm | GL 14 (6 mm) 3) | DN 4/6 |
| Gas connections (US) | 1/4" | GL 14 (1/4") 3) | 1/4"-1/6" |
| Condensate out connections (metric) | G3/8 | GL 25 (12 mm) 3) | G3/8 |
| Condensate out connections (US) | NPT 3/8" | GL 25 (1/2") ³⁾ | NPT 3/8" |


¹⁾ Max. cooling capacity of the cooler must be considered.

²⁾ Models marked I have NPT threads or US tubes, respectively.

³⁾ Gasket inside diameter.

^{4) 160} bar on request.

Dimensions (mm)

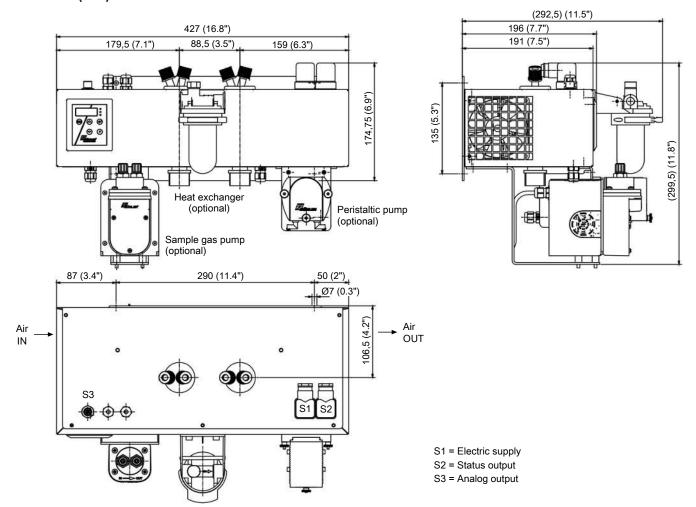

Ordering instructions

Gas cooler type with two in-line heat exchangers

The item number is a code for the configuration of your unit. Please use the following model code:

4496 6 1 1 X 2 X 1 X X X X X X X X 0 0 0 Product Characteristics

| Gas cooler model 1 | |
|--|--|
| 2 TC-Double 6112 X2 Ambient temperature 60 °C Certifications 2 for explosive areas Supply voltage | |
| Certifications 2 for explosive areas Supply voltage | |
| 2 for explosive areas Supply voltage | |
| Supply voltage | |
| | |
| 1 115 V AC 50/60 Hz | |
| 113 V AC, 30/00 HZ | |
| 2 230 V AC, 50/60 Hz | |
| Heat exchanger | |
| 1 1 0 Stainless steel, PTS, metric | |
| 1 1 5 Stainless steel, PTS-I, US | |
| 1 2 0 Duran glass, PTG, metric | |
| 1 2 5 Duran glass, PTG-I, US | |
| 1 3 0 PVDF, PTV, metric | |
| 1 3 5 PVDF, PTV-I, US | |
| Condensate drain 1) | |
| 0 without condensate drain | |
| 2 CPdouble X2 with hose nipple, angled | |
| 4 CPdouble X2 with screw connection 2) | |
| Sample gas pumps 1)3) | |
| 0 without sample gas pump | |
| 1 P1.3, PVDF | |
| 2 P1.3, with bypass valve | |
| Humidity sensor/filter 1) 2) | |
| 0 0 without filter, without moisture detector | |
| 0 1 without filter, 1 moisture detector with PVDF adapter 4) | |
| 1 0 1 filter, without moisture detector | |
| 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 | |
| Signal outputs | |
| 0 0 status output only | |
| 1 0 Analog output, 420 mA additional | |

 $^{^{1)}}$ With this option, the maximum ambient temperature is limited to 50 °C.

²⁾ Metric or US connection, per heat exchanger.

³⁾ Factory installed tubing for suction operation.

⁴⁾ Also available in stainless steel.

TC-Double X2

Consumables and accessories

| Item no. | Description |
|-------------|--|
| 4510008 | Automatic condensate drain AK 5.2 (pressure operation only) |
| 4510028 | Automatic condensate drain AK 5.5 (pressure operation only) |
| 4410004 | Automatic condensate drain AK 20 (pressure operation only) |
| 4410001 | Automatic condensate drain 11 LD V 38 (pressure operation only) |
| 41030050 | Replacement filter element F2; 5-pack |
| 9144050038 | Cable for cooler temperature analog output 4 m |
| 4410005 | Condensate trap GL1, 0.4 L |
| 44920035012 | Condensate pump replacement hose, Tygon (Norprene), angled hose nipple |
| 44920035016 | Condensate pump replacement hose, Tygon (Norprene), angled hose nipple and screw connection (metric) |
| 44920035017 | Condensate pump replacement hose, Tygon (Norprene), angled hose nipple and screw connection (US) |
| 4228003 | Bellow for P1 pump |
| 9009398 | O-ring for bypass P1 pump |
| 4228066 | Set inlet/outlet valves 70 °C for P1 pump |