



## Pressure sensors/pressure switches

### Pressotronik PT77

## Installation and Operation Instructions

Original instructions





Bühler Technologies GmbH, Harkortstr. 29, D-40880 Ratingen  
Tel. +49 (0) 21 02 / 49 89-0, Fax: +49 (0) 21 02 / 49 89-20  
Internet: [www.buehler-technologies.com](http://www.buehler-technologies.com)  
E-Mail: [fluidcontrol@buehler-technologies.com](mailto:fluidcontrol@buehler-technologies.com)

Read this instruction carefully prior to installation and/or use. Pay attention particularly to all advises and safety instructions to prevent injuries. Bühler Technologies can not be held responsible for misusing the product or unreliable function due to unauthorised modifications.

All rights reserved. Bühler Technologies GmbH 2024

Document information

Document No..... BE130003

Version.....05/2024

# Contents

|       |                                                                      |    |
|-------|----------------------------------------------------------------------|----|
| 1     | Introduction .....                                                   | 3  |
| 1.1   | Intended Use .....                                                   | 3  |
| 1.2   | Functionality .....                                                  | 3  |
| 1.2.1 | Pressure monitoring .....                                            | 3  |
| 1.3   | Design types .....                                                   | 3  |
| 1.4   | Model key .....                                                      | 4  |
| 1.5   | Contents .....                                                       | 4  |
| 2     | Safety instructions .....                                            | 5  |
| 2.1   | Important advice .....                                               | 5  |
| 2.2   | General hazard warnings .....                                        | 6  |
| 3     | Transport and storage .....                                          | 7  |
| 4     | Setup and connection .....                                           | 8  |
| 4.1   | Installation .....                                                   | 8  |
| 4.1.1 | Upside down pressure sensor installation .....                       | 9  |
| 4.2   | Electrical connections .....                                         | 10 |
| 5     | Operation and control .....                                          | 11 |
| 5.1   | Start-up procedure .....                                             | 11 |
| 5.2   | LED statuses .....                                                   | 11 |
| 5.3   | General key functions .....                                          | 12 |
| 5.4   | Keylock enabled .....                                                | 12 |
| 5.5   | Menu overview .....                                                  | 13 |
| 5.6   | Changing basic settings .....                                        | 14 |
| 5.6.1 | Disabling normal error handling .....                                | 14 |
| 5.6.2 | Define switching outputs .....                                       | 14 |
| 5.6.3 | Changing the display direction .....                                 | 15 |
| 5.6.4 | Setting the pressure unit .....                                      | 15 |
| 5.6.5 | Setting the maximum pressure .....                                   | 15 |
| 5.6.6 | Set display refresh rate .....                                       | 16 |
| 5.6.7 | Enable/disable keylock .....                                         | 16 |
| 5.6.8 | Restore factory settings (Reset) .....                               | 16 |
| 5.7   | Switching outputs .....                                              | 18 |
| 5.7.1 | Switching output x: Definition of the switching characteristic ..... | 19 |
| 5.7.2 | Switching output x: Upper switching limit (switching point) .....    | 20 |
| 5.7.3 | Switching output x: Lower switching limit (switch-back point) .....  | 20 |
| 5.7.4 | Switching output x: Switch-on delay .....                            | 21 |
| 5.7.5 | Switching output x: Switch-back delay .....                          | 21 |
| 5.7.6 | Switching output x: Testing the switching output .....               | 21 |
| 5.7.7 | Change status LED display function .....                             | 22 |
| 5.8   | Analogue outputs .....                                               | 23 |
| 5.8.1 | Analogue output x: Assigning the upper limit .....                   | 23 |
| 5.8.2 | Analogue output x: Lower limit assignment .....                      | 23 |
| 5.8.3 | Analogue output x: Signal type assignment .....                      | 23 |
| 5.8.4 | Analogue output x: Testing the analogue output .....                 | 24 |
| 5.9   | Diagnostic options .....                                             | 24 |
| 5.9.1 | View logbook .....                                                   | 24 |
| 5.9.2 | Maximum and minimum pressure .....                                   | 25 |
| 5.9.3 | Define switching output to log .....                                 | 25 |
| 5.9.4 | Delay for storing the Min/Max pressure .....                         | 26 |
| 6     | Cleaning and Maintenance .....                                       | 27 |
| 7     | Service and repair .....                                             | 28 |
| 7.1   | Troubleshooting .....                                                | 28 |
| 7.2   | Spare parts and accessories .....                                    | 29 |
| 8     | Disposal .....                                                       | 30 |
| 9     | Appendices .....                                                     | 31 |

|     |                                                        |    |
|-----|--------------------------------------------------------|----|
| 9.1 | Technical Data Pressotronik 700.....                   | 31 |
| 9.2 | Technical Data Pressotronik 770 .....                  | 33 |
| 9.3 | Technical Data Pressotronik 771 .....                  | 34 |
| 9.4 | Standard pin assignment Pressotronik 770.....          | 36 |
| 9.5 | Standard pin assignment Pressotronik 770 and 771 ..... | 36 |
| 9.6 | Current settings.....                                  | 37 |
| 9.7 | Display ranges .....                                   | 37 |
| 9.8 | Display resolution .....                               | 38 |
| 9.9 | Menu Sequence Overview .....                           | 39 |
| 10  | Attached documents .....                               | 40 |

# 1 Introduction

## 1.1 Intended Use

These devices are pressure sensors or pressure switches for indicating and controlling the pressure in fluid systems.

Please note the technical data in the appendix for the specific intended use, existing material combinations, as well as pressure and temperature limits.

### WARNING



All device models are solely intended for industrial applications. They are **not safety components**. The devices must not be used if failure or malfunction thereof jeopardises the safety and health of persons.  
Use in explosive areas is **prohibited**.

## 1.2 Functionality

### 1.2.1 Pressure monitoring

In pressure monitoring a pressure sensor is located directly on the tank or on the piping and has a line connecting it to the display unit or the control room. Alternatively, a pressure sensor with attached display electronics is used. A ceramic or stainless steel measuring cell serves as the sensor element. These can have an application range of a few millibar to several hundred bar. The hydraulic pressure applied to the measuring cell is recorded by a sensor element attached to the measuring cell and processed or displayed by downstream electronics. Regular switching signals as well as continuous voltage or current signals can be used as the output signals.

Clocked signals with variable output frequency can also be used, for example to record a quasi-continuous pressure signal via the frequency input on an SPS (eliminating the use of an expensive analogue input card for the SPS).

## 1.3 Design types

The Pressotronik is equipped with different switching and analogue outputs based on the configuration.

### Choose from the following pressure sensors or pressure switches:

|                 |                                                                                                                                                                                                            |
|-----------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>PT 770-x</b> | This version allows the display and control unit to be positioned anywhere. The pressure sensor may be installed directly at the measuring point. The sensor and display connect via cable with M12 plugs. |
| <b>PT 771-x</b> | With this version the pressure transmitter is built into the display and control unit. The unit is installed directly at the measuring point.                                                              |

Please refer to the type plate for your equipment configuration. In addition to the job number, this also contains the item number and type designation

## 1.4 Model key

| PT-XXX-XXX-XXX                     |     |             |                                                 |
|------------------------------------|-----|-------------|-------------------------------------------------|
| Model designation                  |     | Output card |                                                 |
| Version                            |     | -1D1A**     | IO-Link<br>1 x PNP analogue output              |
| 770 Remote display for transmitter |     | -1D1S       | IO-Link<br>1 x PNP switching output             |
| 771 Transmitter built into display |     | -2S         | 2 x PNP switching output                        |
| Pressure range (PT771 only)*       | 010 | -4S         | 4 x PNP switching output                        |
|                                    | 025 | -6S         | 6 x PNP switching output                        |
|                                    | 100 | -1S-K       | 1 x PNP switching output<br>1 x analogue output |
|                                    | 250 | -2S-K       | 2 x PNP switching output<br>1 x analogue output |
|                                    | 400 | -4S-K       | 4 x PNP switching output<br>1 x analogue output |
|                                    | 600 |             |                                                 |

\*on PT770 the pressure range can be preset at the factory.

\*\*only for version PT771.

## 1.5 Contents

- Pressotronik
- Product documentation
- Connection/mounting accessories (optional)

## 2 Safety instructions

### 2.1 Important advice

Operation of the device is only permitted if:

- the product is used under the conditions described in the installation- and operation instruction, the intended application according to the type plate and the intended use. In case of unauthorized modifications done by the user Bühler Technologies GmbH can not be held responsible for any damage,
- when complying with the specifications and markings on the nameplates.
- the performance limits given in the datasheets and in the installation- and operation instruction are obeyed,
- monitoring devices and safety devices are installed properly,
- service and repair is carried out by Bühler Technologies GmbH,
- only original spare parts are used.

This manual is part of the equipment. The manufacturer keeps the right to modify specifications without advanced notice. Keep this manual for later use.

### Signal words for warnings

**DANGER**

Signal word for an imminent danger with high risk, resulting in severe injuries or death if not avoided.

**WARNING**

Signal word for a hazardous situation with medium risk, possibly resulting in severe injuries or death if not avoided.

**CAUTION**

Signal word for a hazardous situation with low risk, resulting in damaged to the device or the property or minor or medium injuries if not avoided.

**NOTICE**

Signal word for important information to the product.

### Warning signs

These instructions include the following warnings:



General warning sign



General mandatory sign



Voltage warning



Unplug from mains



High pressure warning

## 2.2 General hazard warnings

The equipment must be installed by a professional familiar with the safety requirements and risks.

Be sure to observe the safety regulations and generally applicable rules of technology relevant for the installation site. Prevent malfunctions and avoid personal injuries and property damage.

### **The operator of the system must ensure:**

- Safety notices and operating instructions are available and observed,
- The respective national accident prevention regulations are observed,
- The permissible data and operational conditions are maintained,
- Safety guards are used and mandatory maintenance is performed,
- Legal regulations are observed during disposal,
- compliance with national installation regulations.

### **Maintenance, Repair**

Please note during maintenance and repairs:

- Repairs to the unit must be performed by Bühler authorised personnel.
- Only perform conversion-, maintenance or installation work described in these operating and installation instructions.
- Always use genuine spare parts.
- Do not install damaged or defective spare part. If necessary, visually inspect prior to installation to determine any obvious damage to the spare parts.

Always observe the applicable safety and operating regulations in the respective country of use when performing any type of maintenance.

The method for cleaning the devices must be adapted to the IP protection class of the devices. Do not use cleaners which could damage the device materials.

## **3 Transport and storage**

Only transport the product inside the original packaging or a suitable alternative.

The equipment must be protected from moisture and heat when not in use. It must be stored in a covered, dry, dust-free room at room temperature.

## 4 Setup and connection

### DANGER

#### Electric voltage

Risk of electric shock

- a) Always disconnect the unit from the mains before performing work.
- b) Secure the equipment from accidental restarting.
- c) The equipment may only be installed, maintained and put into operation by instructed, competent personnel.
- d) Always observe the applicable safety regulations for the operating site.



### DANGER

#### Toxic, acidic gases/liquids

Protect yourself from toxic, corrosive gasses/liquids when performing any type of work. Wear appropriate protective equipment.



### 4.1 Installation

#### WARNING

#### Gases or liquids discharged under pressure

Depressurise the system before installing or removing the transmitter.





The Pressotronik housing mounts to a 35 mm (1.4") top-hat rail. This allows it to easily be mounted in a central location without additional mounting aids or installed in control cabinets. The hydraulic connection for the transmitter is carried out via G $\frac{1}{4}$  external thread, DIN 3852 shape E. The transmitter connects to the display and control unit via cable with M12 plug-in connector.

When direct mounting the (display and control unit with transmitter), the unit screws into the transmitter. Only use the spanner (SW 21) on the hexagon flat. Avoid force being transmitted via the housing.

Pressotronik

Display and control unit with offset transmitter, for top-hat rail mounting 35 mm (1.4").

Display and control unit with built-in transmitter, for direct mounting.

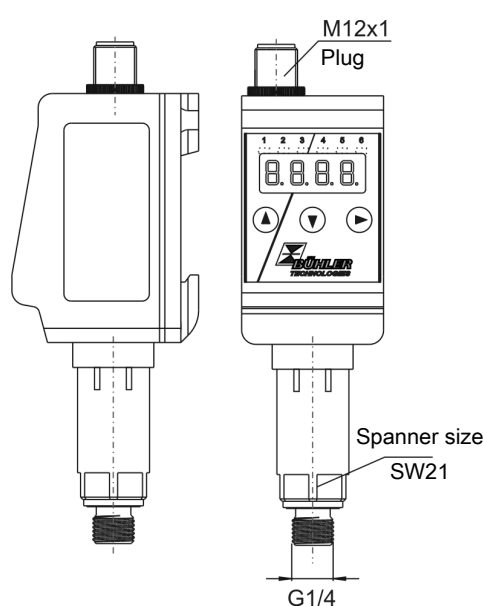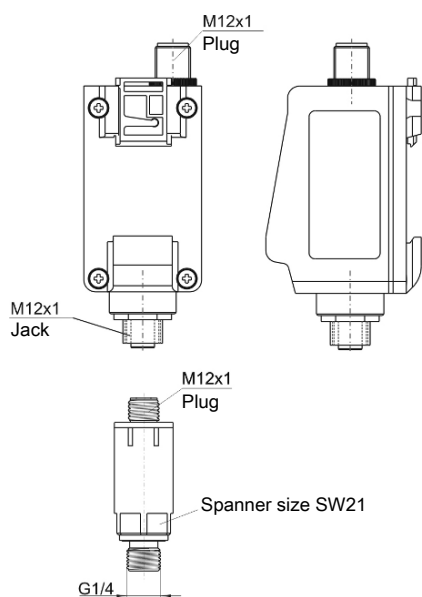

**DANGER**

**Electric voltage**



**Risk of electric shock**

When connecting devices, please note the maximum voltages and currents (see technical data) and use the correct wire cross-sections and circuit breakers. When selecting the connection lines, also note the maximum operating temperatures of the devices.

**Installation in special areas of application:**

If the device will be installed outdoors or in wet areas, the maximum operating voltage is max. 16 V DC effective or 35 V DC.



## 4.1.1 Upside down pressure sensor installation


The **Pressotronik 771** can also be installed rotated by 180°.

The hydraulic connection for the transmitter is carried out via G $\frac{1}{4}$  external thread, DIN 3852 shape E. Depending on the desired position, the sensor can be mounted facing up or down.

Only use the spanner (SW 21) on the hexagon flat when mounting. Avoid force being transmitted via the housing.


**Pressotronik 771**

Display and control unit with built-in transmitter (upright)

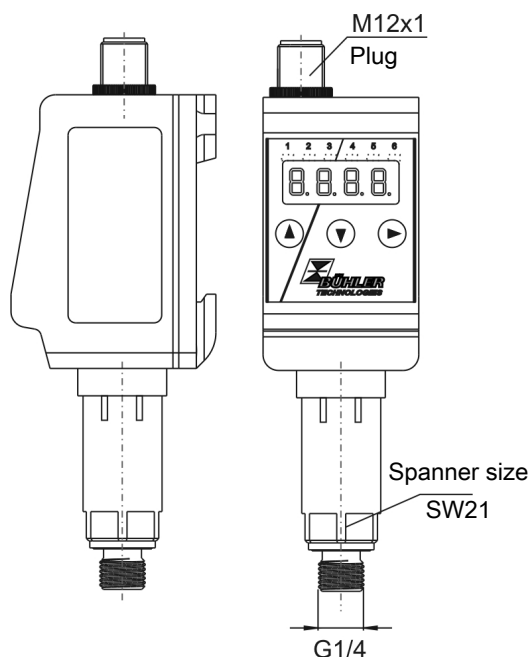

**Pressotronik 771**

Display and control unit with built-in transmitter (upside down)

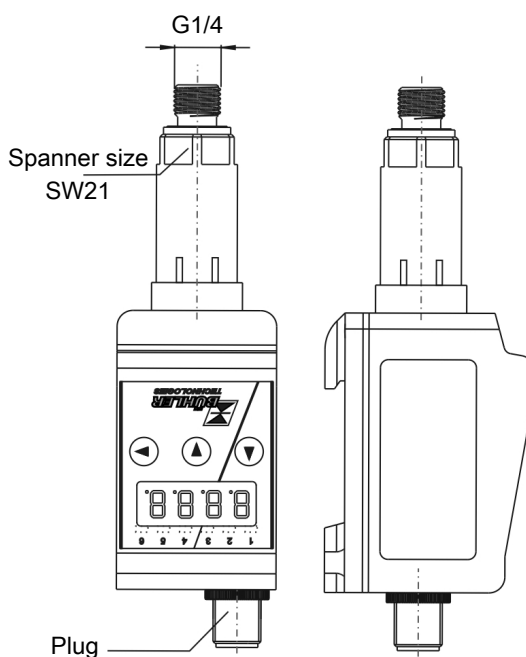

Please note the following particularities when turning the Pressotronik:


- The key order changes, the ► key now points to the left (◄) and is located on the left.
- The ▲ and ▼ keys remain the same.
- Even with it being at the top end of the numbers when turning the display, the decimal point is a decimal place.

## 4.2 Electrical connections

A cable connects the sensor to a jack at the bottom of the device. This cable also supplies the input signal for the sensor.

Electricity is supplied via plug connectors. Please refer to the appendix for installation dimensions, nominal voltage and plug configuration.

The temperature switching outputs are PNP transistors (see illustration):

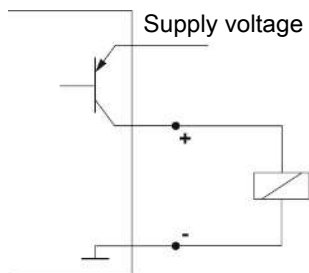

**Note:** When measuring the switching output with high-load measuring device inputs or when used as a frequency output, the load must be set to 10 k $\Omega$  between the output and earth (GND) to avoid faulty measurements.

## 5 Operation and control

### NOTICE




The device must not be operated beyond its specifications.

### 5.1 Start-up procedure

The device will automatically switch on when connected to power. It will first briefly display the software version, at which time the device will also check the built-in components. The display will then switch to displaying measurements.

The following describes the function of the display and control unit:

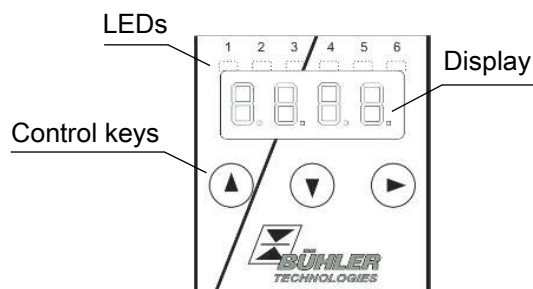

If an error message appears in the display during operation, please refer to the **Troubleshooting** table under chapter “Service and Repair”.

### 5.2 LED statuses

LEDs above the measurement display indicate the status of the switching outputs. The LEDs are permanently assigned to the switching outputs.

The following table shows the factory settings:

|  |                                                             |
|--|-------------------------------------------------------------|
|  | LED 1 – yellow<br>Status switching output 1                 |
|  | LED 2 – red<br>Status switching output 2 (if applicable)    |
|  | LED 3 – yellow<br>Status switching output 3 (if applicable) |
|  | LED 4 – red<br>Status switching output 4 (if applicable)    |
|  | LED 5 – yellow<br>Status switching output 5 (if applicable) |
|  | LED 6 – red<br>Status switching output 6 (if applicable)    |

The switching characteristics of the LED (on if switching contact closed or open) can be changed.

## 5.3 General key functions

The keys below the display are used for operation.

The menu controls are detailed in the following chapters.

| Key            | Mode                         | Function                                                                                                                        |
|----------------|------------------------------|---------------------------------------------------------------------------------------------------------------------------------|
| ▶              | – Measurement display:       | Toggles the display unit.                                                                                                       |
|                | – In the menu:               | Move down one menu level.<br>Move up one menu level.                                                                            |
|                | – At the end of the menu:    | <br>The display indicates the end of the menu. |
|                | – Following input/selection: | Confirm and save a numerical value entered or a function selection. The display will flash if a parameter has been changed.     |
| ▲              | – Measurement display:       | Displays the configuration.                                                                                                     |
|                | – In the menu:               | Scroll up menu item, numerical value or function selection. Holding the key will continuously scroll.                           |
| ▼              | – Measurement display:       | Go to main menu.                                                                                                                |
|                | – In the menu:               | Scroll down menu item, numerical value or function selection. Holding the key will continuously scroll.                         |
| ▼ + ▶          | – In the menu:               | Exit the main / sub / drop-down menu and return to displaying the measurement without saving changes to the parameters.         |
| ▲ + ▶          | – In the menu:               | Move to the next higher menu level.                                                                                             |
| 60 s no action | – In the menu:               | Exit the main / sub/ drop-down menu.                                                                                            |

To select a menu item and to enter values:

- Open the main menu with the ▼ key.
- Select the submenu with the ▼ and ▲ keys and open the submenu with the ▶ key.
- If necessary, select the next submenu with the ▼ and ▲ keys and open with the ▶ key.
- Select the desired menu item with the ▼ and ▲ keys and open the list of values with the ▶ key.
- Set the value with the ▼ and ▲ keys and confirm with the ▶ key. The new settings will be saved and the device will return to the submenu.
- Select the menu item EXIT to exit the submenu and confirm with the ▶ key. The device will return to the next menu level up or to the measurement display.

## 5.4 Keylock enabled

With the keylock enabled, selecting the menu with the ▼ key will display  in place of the main menu. The active digit will be indicated by a dot.

- Use the ▲ and ▼ keys to enter the code and confirm with the ▶ key. The active digit will move one place to the right. After entering the 3rd digit the main menu will open.

If the wrong code is entered, the device will return to the measurement display. If you forgot the password you can always enter master code 287 to access the menu.

You can cancel the keylock under *Loc* in submenu **Basic Settings Advanced Options** *bEF* and enter 000 to reset the code.

## 5.5 Menu overview

The menu structure is based on the VDMA standard sheet 24574-1. The menu structure is hierarchic. The top menu level contains the main menu items, e.g. *PrES*, *bEF*, *d, R*, *E*. Each main menu has additional submenu items.

The menu items may vary depending on the device configuration. Not all menu items described below will necessarily apply to your device. Press the ▲ key in display mode to open the configuration. A 4-digit code will appear, e.g.



With the 4 digits tsav meaning:

t: Model

s: Number of switching outputs

a: Number of analogue outputs


v: Device installation type

P = pressure measurement

2, 4 or 6

0 for 1

i = no differentiation

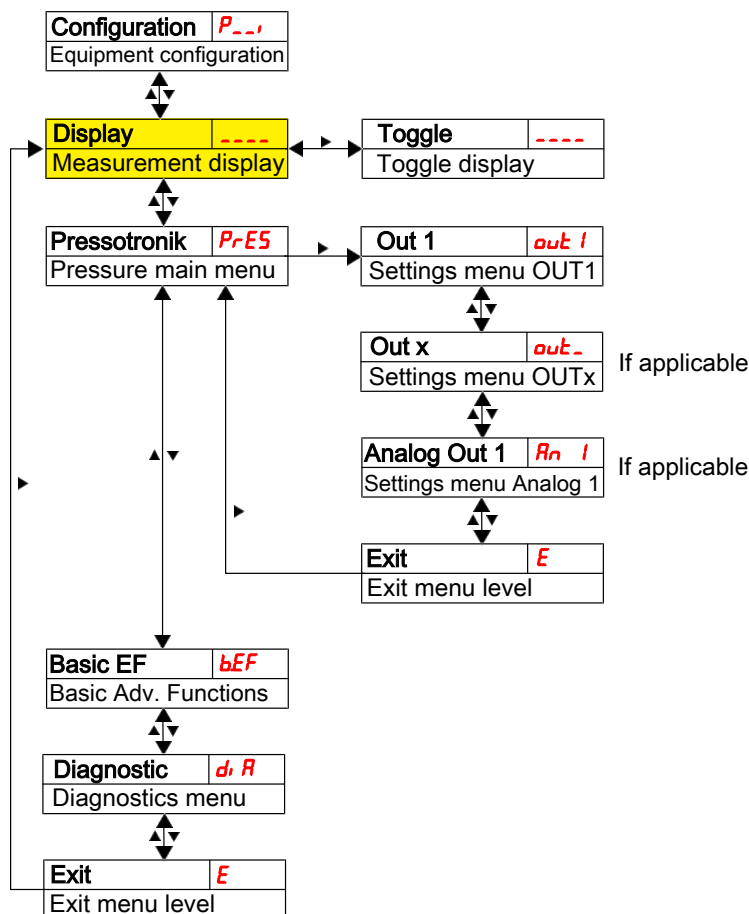

The individual menu items will not be shown if the option does not apply. Example: With a=0 the menu items for configuring the analogue output does not apply. You can then skip the description for this item.

The **Pressotronik** (*PrES*) main menu is used to configure the settings for the switching outputs or the Analogue outputs (if applicable).

The basic device settings can be changed. General settings can be configured under **Basic Settings Advanced Functions** (*bEF*). These settings should be configured first, as they affect the displays and settings for the individual menus. These settings are e.g. the units used.

The **Diagnostic** (*d, R*) menu further contains diagnostics options.

**You will find the detailed illustration of the entire menu structure at the end of these instructions.**

## 5.6 Changing basic settings

The general basic settings can be changed under menu **Basic Settings Extended Functions** (*bEF*). These settings will affect the measurement display and the configuration options in the various main menus. Here you can also change the switching output assignment.

- Press the ▼ key to open the main menu.
- Select menu item (*EF*) using the ▼ and ▲ keys and open the menu with the ► key.

### NOTICE




#### Disabling normal error handling

Disabling normal error handling and analysis could potentially cause dangerous operating states, dangers to the user or machines. Before using this option, review the hazard potential within the process. With this setting, Bühler Technologies GmbH assumes no liability for injuries to health or material damage caused by this setting.

### 5.6.1 Disabling normal error handling

Here you can enable/disable normal error handling and analysis.

The function Disable error handling (*Errh*) is used to disable normal error handling and analysis. This may pose dangers to the user or machine.



The options are:



Disables normal error handling.






Enables normal error handling (default)

Important note: When exceeding the measuring range or if sensor errors occur, the measurement will be frozen and all six LEDs in the status bar will blink. When the measurement returns to the permissible range the LEDs will stop blinking and the display will refresh again as usual.

### 5.6.2 Define switching outputs

Here you can define the switching outputs.

Use the “Define switching outputs” function to define the switching outputs (*rou1* and *rou2*). The switching outputs can also be defined as *Err* or *PrES*.



The options are:



Err



PrES


**Note:**

Options:  
[*Err*, *PrES*]

- Switching outputs 1 and 2 can alternatively be wired as error indicators. In this case the output will be connected as a NC contact which opens when exceeding the range or if an error occurs. The LED assigned to this output will generally not be activated, as all 6 LEDs in the status bar will blink if an error occurs.
- When defining a switching output as an error indicator it will no longer be an option for normal switching output settings.

### 5.6.3 Changing the display direction

Here the display is rotated so it can be read when installing the sensor upside down:



The options are:




Display remains upright, i.e. the delivery state.

Rotates the display 180°.

### 5.6.4 Setting the pressure unit

Used to set the unit symbol for the pressure:



Options:

[**n**bAr, bAr, **n**Pa, PSi]

The options are:



mbar



bar



MPa





psi

**Note:**

- **n**bAr can only be selected when max. pressure (P.Hi) ≤ 10 bar
- Values are automatically converted and the measuring range adjusted. However, always check the respective switching points and switch-back points.

### 5.6.5 Setting the maximum pressure

This is used to set the maximum pressure for the connected sensor:



**Assigning the maximum pressure:**

**Note:**

- Values are automatically converted and the measuring range adjusted. However, always check the respective switching points and switch-back points.
- The minimum pressure will always be assumed to be 0 bar (0 psi).

## 5.6.6 Set display refresh rate

The refresh rate of the display can be changed based on the application. The display can also be completely disabled. The LEDs will remain functional.



The options are:



fast



medium



slow




Display off

**Note:**

- Error messages will still appear, even with the display off.

## 5.6.7 Enable/disable keylock

The keylock can be enabled to prevent unauthorised changes to the device settings.



The keylock will be enabled after entering at least one digit > 0. A dot indicates the active digit during this input.



Setting range:  
000 to 999


- Use the ► key to open the list of values:
- Enter the digit using the ▼ and ▲ keys (0 to 9) and press the ► key to confirm. The active digit will move one place to the right.
- Lastly, press the ► key to confirm the code. The device will now return to the submenu.

**Note:**

- To disable the keylock enter: 000

## 5.6.8 Restore factory settings (Reset)

Use the Reset function (*rES*) to restore the factory settings. All changes will be lost. Since this will also reset the limits, you must check the settings for the individual switching outputs.



The options are:



Original status:  
No,  
keep current settings



Original status:  
Yes,  
reset settings to the factory defaults.

The factory settings are:

Definitions:

|                     |                                                            |
|---------------------|------------------------------------------------------------|
| $SP\ x / rP\ x$     | Switching point / switch-back point x                      |
| $dS\ x / dr\ x$     | Switch-on delay / switch-back delay for switching output x |
| $R\ x.Hi / R\ x.Lo$ | Maximum and minimum measurement for output                 |
| $Rou\ x$            | Analogue output signal type                                |
| $ou\ x$             | Switching characteristic for switching output x            |
| $P_{uni}$           | Pressure unit                                              |
| $P_{Hi}$            | Maximum pressure                                           |
| $di\ S$             | Display refresh rate                                       |
| $Loc$               | Keylock                                                    |
| $S_{log}$           | Switching output logged                                    |
| $dP_{min}$          | Delay for recording the minimum / maximum pressure         |

**Note:** For customer-specific specifications the factory preset may vary from those listed here.

## Basic settings:

| Basic Settings |             |
|----------------|-------------|
| $P_{uni}$      | $bar$       |
| $P_{Hi}$       | $P_{max}^*$ |
| $di\ S$        | $FAST$      |
| $Loc$          | $000$       |

\* The maximum pressure  $P_{max}^*$  varies by the transmitter attached, see type plate.

## Version with 1 switching output:

| Switching outputs       |                                                   |
|-------------------------|---------------------------------------------------|
| $SP\ 1 / rP\ 1$         | $P_{max}^* \cdot 50\ \% / P_{max}^* \cdot 45\ \%$ |
| $dS\ 1 / dr\ 1 / ou\ 1$ | $0 / 0 / Hno$                                     |

\* The maximum pressure  $P_{max}$  varies by the transmitter attached, see type plate.

## Version with 2 switching outputs:

| Switching outputs       |                                                   |
|-------------------------|---------------------------------------------------|
| $SP\ 1 / rP\ 1$         | $P_{max}^* \cdot 50\ \% / P_{max}^* \cdot 45\ \%$ |
| $dS\ 1 / dr\ 1 / ou\ 1$ | $0 / 0 / Hno$                                     |
| $SP\ 2 / rP\ 2$         | $P_{max}^* \cdot 60\ \% / P_{max}^* \cdot 55\ \%$ |
| $dS\ 2 / dr\ 2 / ou\ 2$ | $0 / 0 / Hno$                                     |

\* The maximum pressure  $P_{max}$  varies by the transmitter attached, see type plate.

## Version with 4 switching outputs:

| Switching outputs       |                                                   |
|-------------------------|---------------------------------------------------|
| $SP\ 1 / rP\ 1$         | $P_{max}^* \cdot 50\ \% / P_{max}^* \cdot 45\ \%$ |
| $dS\ 1 / dr\ 1 / ou\ 1$ | $0 / 0 / Hno$                                     |
| $SP\ 2 / rP\ 2$         | $P_{max}^* \cdot 60\ \% / P_{max}^* \cdot 55\ \%$ |
| $dS\ 2 / dr\ 2 / ou\ 2$ | $0 / 0 / Hno$                                     |
| $SP\ 3 / rP\ 3$         | $P_{max}^* \cdot 70\ \% / P_{max}^* \cdot 65\ \%$ |
| $dS\ 3 / dr\ 3 / ou\ 3$ | $0 / 0 / Hno$                                     |
| $SP\ 4 / rP\ 4$         | $P_{max}^* \cdot 80\ \% / P_{max}^* \cdot 75\ \%$ |
| $dS\ 4 / dr\ 4 / ou\ 4$ | $0 / 0 / Hno$                                     |

\* The maximum pressure  $P_{max}$  varies by the transmitter attached, see type plate.

**Version with 6 switching outputs:****Switching outputs**

|                        |                                                    |
|------------------------|----------------------------------------------------|
| <i>SP1 / rP1</i>       | $P_{\max}^* \cdot 50 \% / P_{\max}^* \cdot 45 \%$  |
| <i>dS1 / dr1 / ou1</i> | <i>0 / 0 / Hno</i>                                 |
| <i>SP2 / rP2</i>       | $P_{\max}^* \cdot 60 \% / P_{\max}^* \cdot 55 \%$  |
| <i>dS2 / dr2 / ou2</i> | <i>0 / 0 / Hno</i>                                 |
| <i>SP3 / rP3</i>       | $P_{\max}^* \cdot 70 \% / P_{\max}^* \cdot 65 \%$  |
| <i>dS3 / dr3 / ou3</i> | <i>0 / 0 / Hno</i>                                 |
| <i>SP4 / rP4</i>       | $P_{\max}^* \cdot 80 \% / P_{\max}^* \cdot 75 \%$  |
| <i>dS4 / dr4 / ou4</i> | <i>0 / 0 / Hno</i>                                 |
| <i>SP5 / rP5</i>       | $P_{\max}^* \cdot 90 \% / P_{\max}^* \cdot 85 \%$  |
| <i>dS5 / dr5 / ou5</i> | <i>0 / 0 / Hno</i>                                 |
| <i>SP6 / rP6</i>       | $P_{\max}^* \cdot 100 \% / P_{\max}^* \cdot 95 \%$ |
| <i>dS6 / dr6 / ou6</i> | <i>0 / 0 / Hno</i>                                 |

\* The maximum pressure  $P_{\max}$  varies by the transmitter attached, see type plate.

**Version with analogue output:****Analogue output**


|                         |                    |
|-------------------------|--------------------|
| <i>RAH / RLo / Rdu1</i> | <i>0 / 100 / 1</i> |
|-------------------------|--------------------|

**Diagnostic settings:****Diagnostics**

|             |             |
|-------------|-------------|
| <i>Sduw</i> | <i>out1</i> |
| <i>PNn</i>  | <i>00</i>   |
| <i>dPNn</i> | <i>0</i>    |

**5.7 Switching outputs**

All switching outputs are configured the same way. The switching output number is therefore represented by x. Open the switching output to be configured from the menu for the respective measured variable.



The switching output allocation and other basic settings related to all switching outputs can be configured in menu **Basic Settings Advanced Functions**.

Use submenu **Advanced Functions** to configure additional settings for each individual switching output which e.g. affect the switching characteristics of the output. The output can also be tested here.

## 5.7.1 Switching output x: Definition of the switching characteristic

The switching characteristic for the output can be configured under the following menu:



OU \_

The options are:

### Hysteresis Function

NO contact or NC contact function when the output signal is set when exceeding the configured switching point. The output signal will be deleted if the value is below the configured switch-back point.

Hno

Hysteresis function as the NO contact


Here, NO contact (*Hno*) means the PNP switching output is closed above switching point SPx and opens below switching point rPx.

Here, NC contact (*Hnc*) means the PNP switching output is open above switching point SPx and closes below switching point rPx.

Also see the explanation in the drawing below.

Hnc

Hysteresis function as the NC contact

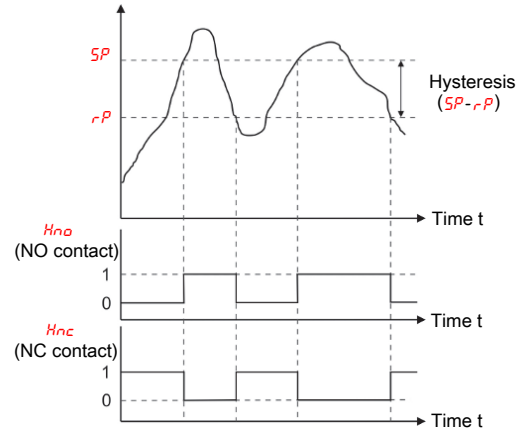

### Window function

NO contact or NC contact function defining a signal window. When the measuring window is reached the output signal is set and deleted upon exiting.

Fno


Window function as NO contact

Here, NO contact (*Fno*) means the PNP switching output is closed if the value is within the window. Otherwise the switching output will be open.

Here, NC contact (*Fnc*) means the PNP switching output is open if the value is within the window. Otherwise the switching output will be closed.

Fnc

Window function as NC contact

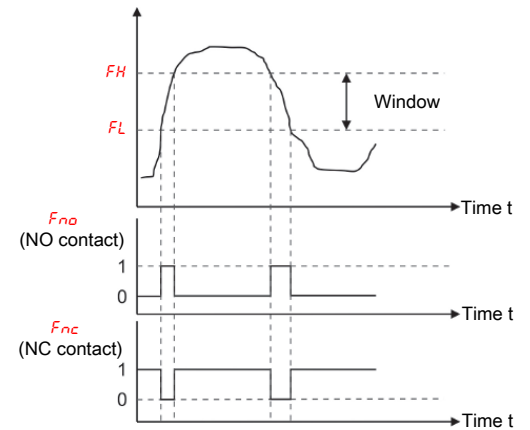

### Frequency output


If the output is defined as a frequency output, a square wave signal with a frequency between 1 Hz and 100 Hz proportional to the measurement will be output.

**Note:** To increase the slew rate of the square wave signal, we recommend loading the switching output with an load of 10 kΩ.


FN

Frequency output

Example: *F ! Lo* = 15 °C, *F ! Hi* = 80 °C with temperature T and frequency f:

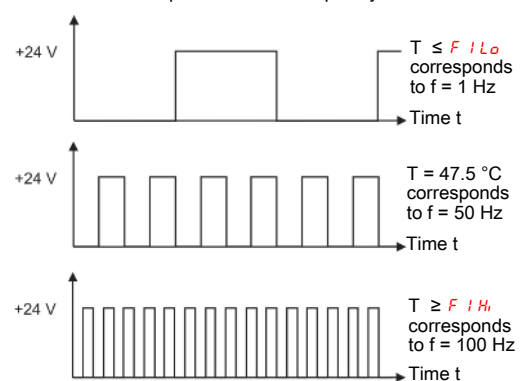


**Note:** The designation of the switching function may vary:

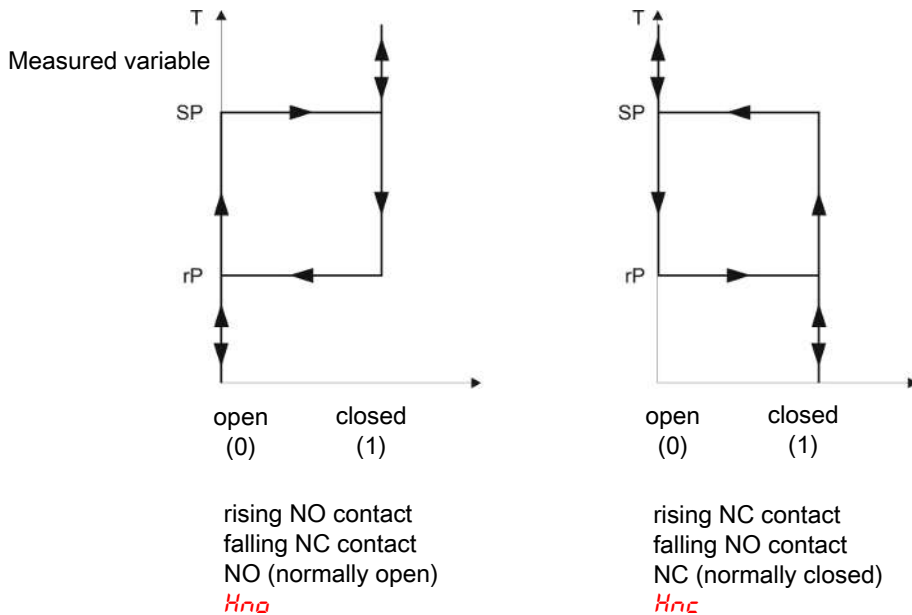

## 5.7.2 Switching output x: Upper switching limit (switching point)

The upper switching limit for switching output Out X can be defined with the following submenu:




Switching point for OUT x

**Note:**

- The switching point must be set to within the range limits (see menu **Basic Settings Advanced Functions**).
- If switching output OUT 1 was assigned the function **Window**, *FHI* will appear. The setting corresponds with the upper window limit.
- If switching output OUT 1 was assigned the function **Frequency output**, *F I.H.* will appear. The setting corresponds to the frequency 100 Hz.

## 5.7.3 Switching output x: Lower switching limit (switch-back point)

The lower switching limit for switching output Out 1 can be defined in the following submenu:



Switch-back point for OUT 1

**Note:**

- The switch-back point must be set to within the range limits.
- If switching output OUT 1 was assigned the function **Window**, *FLI* will appear. The setting corresponds with the lower window limit.
- If switching output OUT 1 was assigned the function **Frequency output**, *F I.Lo* will appear. The setting corresponds to the frequency 1 Hz.

## 5.7.4 Switching output x: Switch-on delay

The menu **Advanced Functions** **EFx** is used to configure additional settings for switching output x. The submenu is at the second submenu level.

The switching and switch-back delay prevents the alarm being triggered too frequently in unstable conditions. The switching delay can be configured with the following menu:



Setting range:  
0...100 seconds



Time span in seconds during which the signal must be continuously present for the switching output to respond.

**Note:**

- If switching output OUT x was assigned the function **Window**, the setting corresponds to the switch-on delay which detects valid reaching of the measuring window.
- If switching output OUT x was assigned the function **Frequency output**, this value will have no affect.

## 5.7.5 Switching output x: Switch-back delay

The switch-back delay can be configured with the following menu:



Setting range:  
0...100 seconds

Switch-back signal delay for OUT x.



Time span in seconds during which the signal must be continuously present for the switching output to respond.

**Note:**

- If switching output OUT x was assigned the function **Window**, the setting corresponds to the switch-on delay which detects valid closing of the measuring window.
- If switching output OUT x was assigned the function **Frequency output**, this value will have no affect.

## 5.7.6 Switching output x: Testing the switching output

The switching output test can be started with the following menu:



Switching output test option

Options when setting **ou 1** to **Hno** / **Hnc** / **Fno** / **Fnc**:



Normal switching output operation

Switching output permanently off disabled

Switching output permanently activated

Options when setting **ou 1** to **F1**:



Normal mode as frequency output

Output Frequency 1 Hz

Output Frequency 100 Hz



**Note:**

- After completing the test, set the function to normal mode **noP**.

## 5.7.7 Change status LED display function

The LEDs in the display indicate the switching status of the output. The following table shows how LEDs are allocated to the switching output:

| Numbering<br>LED                                                                  | Switching<br>output x | Assignment for<br>2 switching outputs | Assignment for<br>4 switching outputs | Assignment for<br>6 switching outputs |
|-----------------------------------------------------------------------------------|-----------------------|---------------------------------------|---------------------------------------|---------------------------------------|
| LED                                                                               | 1                     | LED 1 - yellow                        | LED 1 - yellow                        | LED 1 - yellow                        |
| 1 2 3 4 5 6                                                                       | 2                     | LED 2 - red                           | LED 2 - red                           | LED 2 - red                           |
|  | 3                     |                                       | LED 3 - yellow                        | LED 3 - yellow                        |
|                                                                                   | 4                     |                                       | LED 4 - red                           | LED 4 - red                           |
|                                                                                   | 5                     |                                       |                                       | LED 5 - yellow                        |
|                                                                                   | 6                     |                                       |                                       | LED 6 - red                           |

In the factory setting the LED indicates the physical status of the PNP switching output (switching output closed – LED on).

The logical indicator function may need to be different from the physical signal on the switching output. You can therefore also reverse this indication with this menu (switching output open – LED on).

### Example:



You have 2 switching outputs for the pressure, configured as:

- **Switching output 1:** Max. contact, rising NO contact. The LED lights up when the maximum value is exceeded and the pressure is above the desired range. So this LED lighting up indicates an "Error" status.
- **Switching output 2:** Min contact, rising NO contact. So in the factory setting, the LED lights up when exceeding the minimum pressure. So in this case the LED would light up if the status is okay.


The table shows an example with the factory setting and with inverted status function for LED1. The switching points are defined as:

SP1 = 70 bar, rP1 = 65 bar

SP2 = 80 bar, rP2 = 75 bar

|          | Factory setting                                                                                         | Status function<br>LED 1 inverted                                                                   | State                                                       | Status |
|----------|---------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------|-------------------------------------------------------------|--------|
| <b>A</b> | <br>LED1 ON          | <br>LED1 OFF     | Pressure rises to > 70 bar<br>PNP switching output 1 closed | OK     |
| <b>B</b> | <br>LED2 and LED1 ON | <br>only LED2 ON | Pressure rises to > 80 bar<br>PNP switching output 2 closed | Error  |
| <b>C</b> | <br>LED1 ON          | <br>LED1 OFF     | Pressure falls to < 75 bar<br>PNP switching output 2 open   | OK     |
| <b>D</b> | <br>LED1 OFF         | <br>LED1 ON      | Pressure falls to < 65 bar<br>PNP switching output 1 open   | Error  |

Here you can reverse the LED status function for a contact: the LED lights up if the contact is open, so below the minimum pressure, and the LED lighting up again indicates an "Error" status.



The options are:



LED = output;

the LED lights up when the PNP switching output is closed.



LED = -output;

the LED lights up when the PNP switching output is open.

#### NOTICE




The display function of the status LED affects event logging! Please note chapter "Diagnostic options".

## 5.8 Analogue outputs

### 5.8.1 Analogue output x: Assigning the upper limit

Used to configure at which pressure to output the maximum analogue signal. This is configured in menu:




Note:

- The output range setting must not be less than 10 % of the measuring range:  $A !H_ - A !L_ \geq 10\% * (aHi - aLo)$
- If the range is set too low, the analogue value output may have grades.

Setting range:  
[ aLo ] ... [ aHi ]

### 5.8.2 Analogue output x: Lower limit assignment

Used to configure at which pressure to output the minimum analogue signal. This is configured in menu:




Note:

- The output range setting must not be less than 10 % of the measuring range:  $A !H_ - A !L_ \geq 10\% * (aHi - aLo)$
- If the range is set too low, the analogue value output may have grades.

Setting range:  
[ aLo ] ... [ aHi ]

### 5.8.3 Analogue output x: Signal type assignment

The analogue output can be defined as a voltage or current output with different value ranges. This is configured in menu:



The options are:



4 mA to 20 mA



2 V to 10 V




0 V to 10 V



0 V to 5 V

## 5.8.4 Analogue output x: Testing the analogue output

The analogue output can be tested. The highest, mean and lowest analogue value can be output successively. This is configured in menu:



The options are:



Normal mode



Highest analogue value output



Mean analogue value output



Lowest analogue value output




**Note:**

- After completing the test, set the function to normal mode **noP**.

## 5.9 Diagnostic options

The device is able to log events for a switching output. The LED lighting up is considered an event. The logging of switching procedures therefore depends on how the LED switching function is configured.

The configuration and analysis can be carried out here.



### NOTICE



Only one switching output can be logged. The switching output to be logged is configured in menu item **Set Journal Out** (**5Jou**).

- Press the ▼ key to open the main menu.
- Select menu item **d, R** with the ▼ and ▲ keys.




From here you will be able to access various diagnostic values and measurement monitoring logs.

- Open the menu with the ► key.  
You can now change or view the diagnostic settings.

### 5.9.1 View logbook

The last 6 events for the switching output being logged can be viewed here and all entries deleted:



The journal entries will be displayed as:

- Most recent event **Jor 1** occurred x hours (h) / days (d) ago,
- Events 2 to 5 occurred x hours / days ago,
- The oldest event **Jor 6** occurred x hours / days ago,
- Delete function (---)

**Example:**

**Jor 1** ⇔ 13h, key ▼  
**Jor 2** ⇔ 24h, key ▼, ▲  
**Jor 3** ⇔ 6.1h, key ▼, ▲  
**Jor 4** ⇔ 82h, key ▼, ▲  
**Jor 5** ⇔ non B, key ▼, ▲  
**Jor 6** ⇔ non B, key ▼, ▲  
 ---, key ▲, ► = delete

\* not yet populated, only 4 events have occurred



The information displayed will alternate between the index and time for entry x, e.g. *Jor 1* ↔ *1.4h* for the most recent event 1.4 hours ago.

Press the **▶** key to return to the submenu or use **▼**, **▲** to select the next journal entry.


Confirming the information  with the **▶** key will delete the list of events and return to the submenu.

**Note:**

- If no events have been logged, the display will alternate between *Jor X* and *non*.

## 5.9.2 Maximum and minimum pressure

Used to view or delete the saved maximum and minimum pressure:



The journal entries will be displayed as:

- Maximum pressure value,
- occurred x hours / days ago,
- Minimum pressure value,
- occurred x hours / days ago,
- Delete function

**Example:**

*75b*, Key **▼**  
*8.4h*, key **▼**, **▲**  
*1.7b*, key **▼**, **▲**  
*2.1h*, key **▼**, **▲**  
 ---, key **▲**; **▶** = delete




Press the **▶** key to return to the submenu or use **▼**, **▲** to select the next Journal entry.

Confirming the information  with the **▶** key will delete the list of events and return to the submenu.

Menu order:  
 Max. value,  
 min.  
 time value  
 time  
 delete (reset)

## 5.9.3 Define switching output to log

Used to select the switching output to be logged. Only one switching output can be logged.



Switching output logging.

Options:  
*out 1* to *out X*


**NOTICE**



Values are backed up from volatile to non-volatile memory approx. every three hours.

### 5.9.4 Delay for storing the Min/Max pressure

A delay time for saving the minimum and maximum pressure can be set to record reliable values when the pressure fluctuates. Here, enter the time span in seconds during which the signal must be continuously present before the pressure is logged.



– Set the desired delay.

Setting range:  
0...100 seconds

## **6 Cleaning and Maintenance**

This device is maintenance-free.

The method for cleaning the devices must be adapted to the IP protection class of the devices. Do not use cleaners which could damage the device materials.

## 7 Service and repair

This chapter contains information on troubleshooting and correction should an error occur during operation.

Repairs to the unit must be performed by Bühler authorised personnel.

Please contact our Service Department with any questions:

**Tel.: +49-(0)2102-498955** or your agent

For further information about our services and customised maintenance visit <http://www.buehler-technologies.com/service>.

If the equipment is not functioning properly after correcting any malfunctions and switching on the power, it must be inspected by the manufacturer. Please send the equipment inside suitable packaging to:

**Bühler Technologies GmbH**

**- Reparatur/Service -**

**Harkortstraße 29**

**40880 Ratingen**

**Germany**

Please also attach the completed and signed RMA decontamination statement to the packaging. We will otherwise be unable to process your repair order.

You will find the form in the appendix of these instructions, or simply request it by e-mail:

**service@buehler-technologies.com.**

### 7.1 Troubleshooting

| Problem / Malfunction                                                                                                                                                                                            | Possible cause                         | Action                                                                                                    |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------|-----------------------------------------------------------------------------------------------------------|
| No display                                                                                                                                                                                                       | – No supply voltage                    | – Check cable and replace, if necessary                                                                   |
| Error messages on the display:                                                                                                                                                                                   |                                        |                                                                                                           |
| Alternating between Err and Exxx: e.g.  ↔  |                                        |                                                                                                           |
|  Error 001                                                                                                                    | – Ambient temperature too low          | – Maintain limits                                                                                         |
|  Error 002                                                                                                                    | – Ambient temperature too high         | – Maintain limits                                                                                         |
|  Error 064                                                                                                                    | – Cable brake or defective transmitter | – Replace transmitter and/or cable                                                                        |
|  Error 128                                                                                                                    | – Transmitter defective                | – Replace transmitter                                                                                     |
|                                                                                                                                                                                                                  | – Measuring range exceeded             | – Check the system and transmitter, maintain the max. pressure                                            |
|  Error 1024                                                                                                                   | – Second plug has no supply voltage    | – Check the supply voltage for the second plug.                                                           |
|                                                                                                                                                                                                                  |                                        | – Be sure to switch on or plug in the power supply for the second plug before or shortly after the first. |
|                                                                                                                                                                                                                  | – Internal error                       | – Please contact customer service                                                                         |

## Possible errors

| Problem / Malfunction                                                          | Possible cause                            | Action                                                                                                 |
|--------------------------------------------------------------------------------|-------------------------------------------|--------------------------------------------------------------------------------------------------------|
| Switching output not triggering when exceeding limits                          | – Switching output configured incorrectly | – In submenu <b>LoUx</b> : “Test Switching Output” to ensure normal mode                               |
|                                                                                | – Switching output defect                 | – In submenu <b>LoUx</b> : “Test Switching Output” to test the desired switching output                |
| Switching output constantly switching                                          | – Switching output configured incorrectly | – In submenu <b>LoUx</b> : “Test Switching Output” to ensure normal mode                               |
|                                                                                | – Switching output defect                 | – In submenu <b>LoUx</b> : “Test Switching Output” to test the desired switching output                |
| The analogue doesn't receive the full/correct output current                   | – Wrong signal type set                   | – In submenu <b>RoUx</b> : Check and if necessary set the correct signal type (current/voltage output) |
|                                                                                | – Load too high (current output)          | – Reduce load to permissible value                                                                     |
| Analogue output doesn't change the output signal when the input signal changes | – Analogue output configured incorrectly  | – In submenu <b>LoRx</b> : „Test Analogue Output“ to ensure normal mode                                |

## 7.2 Spare parts and accessories

## Pressotronik 700 - Transmitter only

| Item no.  | Description | Pressure range |
|-----------|-------------|----------------|
| 137000100 | PT700-010   | 0 - 10 bar     |
| 137000250 | PT700-025   | 0 - 25 bar     |
| 137001000 | PT700-100   | 0 - 100 bar    |
| 137002500 | PT700-250   | 0 - 250 bar    |
| 137004000 | PT700-400   | 0 - 400 bar    |
| 137006000 | PT700-600   | 0 - 600 bar    |

## Pressotronik 700

## Accessories

| Item no.   | Description                                                              |
|------------|--------------------------------------------------------------------------|
| 9144050010 | Connecting cable M12x1, 4-pin, 1.5 m, angular coupling and straight plug |
| 9144050046 | Connecting cable M12x1, 4-pin, 3.0 m, angular coupling and straight plug |
| 9144050047 | Connecting cable M12x1, 4-pin, 5.0 m, angular coupling and strands       |

## Pressotronik 770/771

| Item no. 4-pin | Item no. 5-pin | Item no. 8-pin | Description                                                       |
|----------------|----------------|----------------|-------------------------------------------------------------------|
| 9144050010     | 9144050016     | 9144050048     | Connecting cable M12x1, 1.5 m, angular coupling and straight plug |
| 9144050046     | 9144050017     | 9144050049     | Connecting cable M12x1, 3.0 m, angular coupling and straight plug |
| 9144050047     | 9144050018     | 9144050033     | Connecting cable M12x1, 5.0 m, angular coupling and strands       |

## 8 Disposal

The applicable national laws must be observed when disposing of the products. Disposal must not result in a danger to health and environment.

The crossed out wheelie bin symbol on Bühler Technologies GmbH electrical and electronic products indicates special disposal notices within the European Union (EU).



The crossed out wheelie bin symbol indicates the electric and electronic products bearing the symbol must be disposed of separate from household waste. They must be properly disposed of as waste electrical and electronic equipment.

Bühler Technologies GmbH will gladly dispose of your device bearing this mark. Please send your device to the address below for this purpose.



We are obligated by law to protect our employees from hazards posed by contaminated devices. Therefore please understand that we can only dispose of your waste equipment if the device is free from any aggressive, corrosive or other operating fluids dangerous to health or environment. **Please complete the "RMA Form and Decontamination Statement", available on our website, for every waste electrical and electronic equipment. The form must be applied to the packaging so it is visible from the outside.**

Please return waste electrical and electronic equipment to the following address:


Bühler Technologies GmbH  
WEEE  
Harkortstr. 29  
40880 Ratingen  
Germany


Please also observe data protection regulations and remember you are personally responsible for the returned waste equipment not bearing any personal data. Therefore please be sure to delete your personal data before returning your waste equipment.

## 9 Appendices

### 9.1 Technical Data Pressotronik 700

#### Pressure transmitter
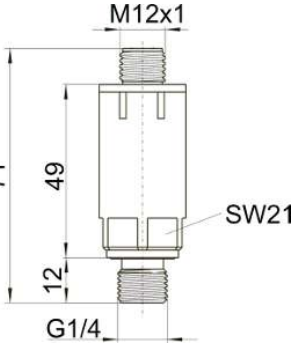
| Pressure range                                   |                                                                                                                         | Dimensions Presstronik 700               |                                                                                     |
|--------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|------------------------------------------|-------------------------------------------------------------------------------------|
|                                                  | 0 - 10 bar<br>0 - 25 bar<br>0 - 100 bar<br>0 - 250 bar<br>0 - 400 bar<br>0 - 600 bar                                    | 71                                       |  |
|                                                  | Other pressure ranges available upon request                                                                            |                                          |                                                                                     |
| Pressure connection                              | G1/4 external thread, DIN 3852 Form E;<br>peak pressure aperture standard for 100 bar and higher                        |                                          |                                                                                     |
| Overload<br>higher values available upon request | 2.5 x full range at 10 to 600 bar (but max. 900 bar)                                                                    |                                          |                                                                                     |
| Burst pressure                                   | 2.5 x full range at 6 to 600 bar (but max. 900 bar)                                                                     | 12                                       | G1/4                                                                                |
| Higher burst pressure available upon request     | Patented medium stop system to prevent medium leaks when exceeding the bursting pressure range (>40 bar rated pressure) |                                          |                                                                                     |
| Material / version                               |                                                                                                                         |                                          |                                                                                     |
| Housing                                          | 1.4305                                                                                                                  |                                          |                                                                                     |
| Material in contact with media                   | Ceramic, 1.4305, PPS, FPM                                                                                               |                                          |                                                                                     |
| Weight                                           | approx. 95 g                                                                                                            |                                          |                                                                                     |
| Temperature                                      |                                                                                                                         |                                          |                                                                                     |
| Medium                                           | -15 °C to + 125 °C                                                                                                      |                                          |                                                                                     |
| Ambient temperature                              | max. 85 °C                                                                                                              |                                          |                                                                                     |
| Temperature influences                           | Within - 40 to +125 °C temperature range                                                                                |                                          |                                                                                     |
|                                                  | Calibration in bar                                                                                                      | Calibration in psi                       |                                                                                     |
| TC0 - Temperature zero error                     | < ±0.15 % FS/10 K                                                                                                       | < ±0.25 % FS/10 K                        |                                                                                     |
| TCE - Temperature full range error               | < ±0.15 % FS/10 K                                                                                                       | < ±0.15 % FS/10 K                        |                                                                                     |
| Response time                                    | < 2 ms / typically 1 ms                                                                                                 |                                          |                                                                                     |
| Electrical data                                  |                                                                                                                         | Standard pin assignment Pressotronik 700 |                                                                                     |
| Supply voltage (U <sub>B</sub> )                 | 10 – 30 V DC (nominal voltage 24 V DC)                                                                                  | Plug: 1xM12x1                            |                                                                                     |
| Degree of protection                             | IP67                                                                                                                    | Pin                                      |                                                                                     |
| Burden Ω                                         | = (U <sub>B</sub> -8 V) / 0.02 A                                                                                        | 1                                        | +24 V DC                                                                            |
| Dielectric strength                              | 500 V DC                                                                                                                | 3                                        | 4-20 mA                                                                             |



**Accuracy**


| Parameter                                        | Unit                     |
|--------------------------------------------------|--------------------------|
| Tolerance zero                                   | max. $\pm 0.3\%$ FS      |
| Tolerance full range                             | max. $\pm 0.3\%$ FS      |
| Resolution                                       | 0.1 % FS                 |
| Sum of linearity, hysteresis and reproducibility | max. $\pm 0.3\%$ FS/10K  |
| Long-term stability per<br>DIN EN 60770          | $\pm 1\%$ FS             |
| TC zero                                          | max. $\pm 0.15\%$ FS/10K |
| TC sensitivity                                   | max. $\pm 0.15\%$ FS/10K |

Test conditions: 25 °C, 45 % rF, supply 24 V DC, K0/TCE -40 °C... +125 °C

## 9.2 Technical Data Pressotronik 770

**Remote display version (PT700 pressure transmitter must be ordered separately)**

|                                  |                                                                       |
|----------------------------------|-----------------------------------------------------------------------|
| Pressure transmitter             | Pressotronik 700                                                      |
| Control unit                     |                                                                       |
| Housing material                 | PA                                                                    |
| Mount                            | 35 mm top-hat rail mounting                                           |
| Weight                           | approx. 400 g                                                         |
| Degree of protection             | IP65                                                                  |
| Analysis display electronics     |                                                                       |
| Display                          | 4 character 7 segment LED display                                     |
| Operation                        | via 3 keys                                                            |
| Starting current input           | approx. 100 mA for 100 ms                                             |
| Power input during operation     | approx. 50 mA                                                         |
| Supply voltage (U <sub>B</sub> ) | 10 - 30 V DC (nominal voltage 24 V DC)<br>18 - 30 V DC (1D1S version) |
| Ambient temperature              | -20 °C to +70 °C                                                      |
| Accuracy                         | ± 1 % from end value                                                  |
| Response time                    | < 10 ms                                                               |
| Input values                     |                                                                       |
| Display units                    | b (bar), P (psi), °MPa                                                |
| Input signal                     | 4-20 mA                                                               |

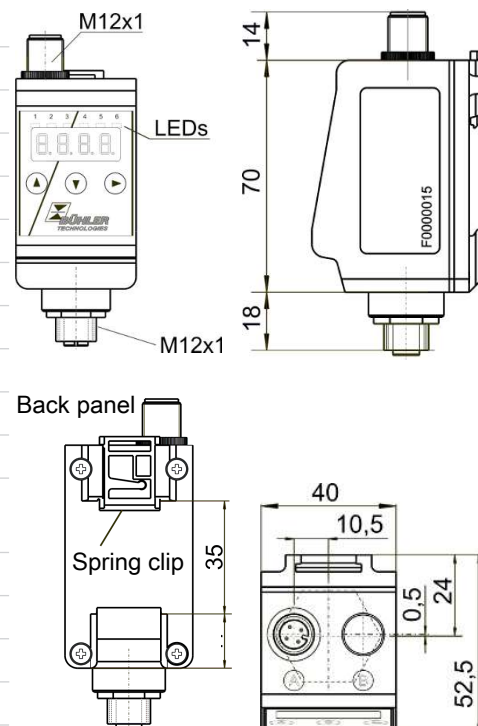

| Optional switching outputs | -1D1S                                | -2S                                  | -4S                                  | -6S                                  |
|----------------------------|--------------------------------------|--------------------------------------|--------------------------------------|--------------------------------------|
| Plug (base)                | 1 x M12 – 4-pin                      | 1 x M12 – 4-pin                      | 1 x M12 – 8-pin                      | 1 x M12 – 8-pin                      |
| Plug (jack)                | 1 x M12 – 4-pin                      | 1 x M12 – 4-pin                      | 1 x M12 – 4-pin                      | 1 x M12 – 4-pin                      |
| <b>Switching outputs</b>   | IO-Link and 1x freely programmable   | 2 x freely programmable              | 4 x freely programmable              | 6 x freely programmable              |
| Alarm memory               | with 1 x assignable to alarm logbook | with 1 x assignable to alarm logbook | with 1 x assignable to alarm logbook | with 1 x assignable to alarm logbook |
| max. switching current     | 0.5 A per output*                    | 0.5 A per output*                    | 0.5 A per output*                    | 0.5 A per output*                    |
| Contact load               | max. 1 A total                       | max. 1 A total                       | max. 1 A total                       | max. 1 A total                       |

\*Output 1 max. 0.2 A.

|                                  | -1S-K                                                    | -2S-K                                                    | -4S-K                                                    |
|----------------------------------|----------------------------------------------------------|----------------------------------------------------------|----------------------------------------------------------|
| Plug (base)                      | 1 x M12 – 4-pin                                          | 1 x M12 – 5-pin                                          | 1 x M12 – 8-pin                                          |
| Plug (jack)                      | 1 x M12 – 4-pin                                          | 1 x M12 – 4-pin                                          | 1 x M12 – 4-pin                                          |
| <b>Switching outputs</b>         | 1 x freely programmable                                  | 2 x freely programmable                                  | 4 x freely programmable                                  |
| Alarm memory                     | with 1 x assignable to alarm logbook                     | with 1 x assignable to alarm logbook                     | with 1 x assignable to alarm logbook                     |
| max. switching current           | 0.5 A per output*                                        | 0.5 A per output*                                        | 0.5 A per output*                                        |
| Contact load                     | max. 1 A total                                           | max. 1 A total                                           | max. 1 A total                                           |
| <b>Analogue outputs</b>          | 1 x pressure                                             | 1 x pressure                                             | 1 x pressure                                             |
| Programmable as                  | 1 x 4 – 20 mA<br>2 - 10 V DC, 0 - 10 V DC,<br>0 - 5 V DC | 1 x 4 – 20 mA<br>2 - 10 V DC, 0 - 10 V DC,<br>0 - 5 V DC | 1 x 4 – 20 mA<br>2 - 10 V DC, 0 - 10 V DC,<br>0 - 5 V DC |
| max. load Ω as current output    | (U <sub>B</sub> – 8V) / 0.02 A                           | (U <sub>B</sub> – 8V) / 0.02 A                           | (U <sub>B</sub> – 8V) / 0.02 A                           |
| min. input load as voltage input | 10 kΩ                                                    | 10 kΩ                                                    | 10 kΩ                                                    |


\*Output 1 max. 0.2 A.

## 9.3 Technical Data Pressotronik 771

### Version with attached transmitter

|                                  |                                                                                 |
|----------------------------------|---------------------------------------------------------------------------------|
| Pressure transmitter             | Pressotronik 700                                                                |
| Control unit                     |                                                                                 |
| Housing material                 | PA                                                                              |
| Mount                            | G1/4 directly mounted display rotates 270°                                      |
| Weight                           | approx. 500 g                                                                   |
| Degree of protection             | IP65                                                                            |
| Display electronics              |                                                                                 |
| Display                          | 4 character 7 segment LED display                                               |
| Control                          | via 3 keys                                                                      |
| Starting current input           | approx. 100 mA for 100 ms                                                       |
| Power input during operation     | approx. 50 mA                                                                   |
| Supply voltage (U <sub>B</sub> ) | 10 - 30 V DC (nominal voltage 24 V DC)<br>18 - 30 V DC (1D1S and 1D1A versions) |
| Ambient temperature              | -20 °C to +70 °C                                                                |
| Accuracy                         | ± 1% from full range                                                            |
| Response time                    | < 10 ms                                                                         |
| Input values                     |                                                                                 |
| Display units                    | b (bar), P (psi), °MPa                                                          |

Housing swivels 270 °C

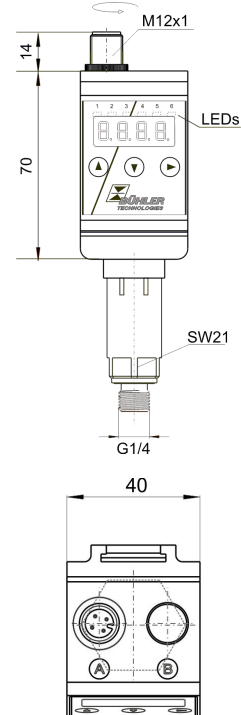

| Optional switching outputs             | -1D1A                                                     | -1D1S                                | -2S                                  |
|----------------------------------------|-----------------------------------------------------------|--------------------------------------|--------------------------------------|
| Plug (base)                            | 1 x M12 – 4-pin                                           | 1 x M12 – 4-pin                      | 1 x M12 – 4-pin                      |
| <b>Switching outputs</b>               | IO-Link and 1x freely programmable                        | IO-Link and 1x freely programmable   | 2 x freely programmable*             |
| Alarm memory                           | with 1 x assignable to alarm logbook                      | with 1 x assignable to alarm logbook | with 1 x assignable to alarm logbook |
| max. switching current                 | 0.5 A per output*                                         | 0.5 A per output**                   | 0.5 A per output**                   |
| Contact load                           | max. 1 A total                                            | max. 1 A total                       | max. 1 A total                       |
| <b>Analogue outputs</b>                | 1 x pressure                                              | -                                    | -                                    |
| Programmable as                        | 1 x 4 – 20 mA,<br>2 - 10 V DC, 0 - 10 V DC,<br>0 - 5 V DC | -                                    | -                                    |
| Max. load Ω as current output          | (U <sub>B</sub> – 8V) / 0.02 A                            | -                                    | -                                    |
| Min. input resistance as voltage input | 10 kΩ                                                     | -                                    | -                                    |

\*also programmable as frequency output

\*\*Output 1 max. 0.2 A.



|                                        | <b>-6S</b>                           | <b>-1S-K</b>                                              | <b>-2S-K</b>                                              |
|----------------------------------------|--------------------------------------|-----------------------------------------------------------|-----------------------------------------------------------|
| Plug (base)                            | 1 x M12 – 8-pin                      | 1 x M12 – 4-pin                                           | 1 x M12 – 5-pin                                           |
| <b>Switching outputs</b>               | 6 x freely programmable*             | 1 x freely programmable                                   | 2 x freely programmable                                   |
| Alarm memory                           | with 1 x assignable to alarm logbook | with 1 x assignable to alarm logbook                      | with 1 x assignable to alarm logbook                      |
| max. switching current                 | 0.5 A per output**                   | 0.5 A per output*                                         | 0.5 A per output*                                         |
| Contact load                           | max. 1 A total                       | max. 1 A total                                            | max. 1 A total                                            |
| <b>Analogue outputs</b>                | -                                    | 1 x pressure                                              | 1 x pressure                                              |
| Programmable as                        | -                                    | 1 x 4 – 20 mA,<br>2 - 10 V DC, 0 - 10 V DC,<br>0 - 5 V DC | 1 x 4 – 20 mA,<br>2 - 10 V DC, 0 - 10 V DC,<br>0 - 5 V DC |
| Max. load $\Omega$ as current output   | -                                    | $(U_B - 8V) / 0.02 \text{ A}$                             | $(U_B - 8V) / 0.02 \text{ A}$                             |
| Min. input resistance as voltage input | -                                    | 10 k $\Omega$                                             | 10 k $\Omega$                                             |

\*\*Output 1 max. 0.2 A.









## 9.4 Standard pin assignment Pressotronik 770

### Pin assignment Pressotronik 770

For the pressure transmitter assignment, see **Pressotronik 700 standard pin assignment**

| Panel jack | 1x M12x1                                                                            |
|------------|-------------------------------------------------------------------------------------|
|            | 4-pin                                                                               |
|            |  |
| Panel jack |  |
| Pin        |                                                                                     |
| 1          | +24 V DC                                                                            |
| 3 / 4      | 4 - 20 mA                                                                           |

## 9.5 Standard pin assignment Pressotronik 770 and 771

| Version    | -1D1A                                                                               | -1D1S                                                                               | -2S                                                                                 | -4S                                                                                 | -6S                                                                                 | -1S-K                                                                                 | -2S-K                                                                                 | -4S-K                                                                                 |
|------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
| Panel plug | 1x M12x1                                                                            |                                                                                     |                                                                                     |                                                                                     |                                                                                     |                                                                                       |                                                                                       |                                                                                       |
|            | 4-pin                                                                               | 4-pin                                                                               | 4-pin                                                                               | 8-pin                                                                               | 8-pin                                                                               | 4-pin                                                                                 | 5-pin                                                                                 | 8-pin                                                                                 |
|            |   |                                                                                     |                                                                                     |                                                                                     |                                                                                     |                                                                                       |                                                                                       |                                                                                       |
| Panel plug |  |  |  |  |  |  |  |  |
| Pin        |                                                                                     |                                                                                     |                                                                                     |                                                                                     |                                                                                     |                                                                                       |                                                                                       |                                                                                       |
| 1          | +24 V DC                                                                            | +24 V DC                                                                            | +24 V DC                                                                            | +24 V DC                                                                            | +24 V DC                                                                            | +24 V DC                                                                              | +24 V DC                                                                              | +24 V DC                                                                              |
| 2          | Analogue (out)                                                                      | S2 (PNP)                                                                            | S2 (PNP)                                                                            | S2 (PNP)                                                                            | S2 (PNP)                                                                            | Analogue (out)                                                                        | S2 (PNP)                                                                              | S2 (PNP)                                                                              |
| 3          | GND                                                                                 | GND                                                                                 | GND                                                                                 | GND                                                                                 | GND                                                                                 | GND                                                                                   | GND                                                                                   | GND                                                                                   |
| 4          | C/Q (IO-Link)                                                                       | C/Q (IO-Link)                                                                       | S1 (PNP)                                                                            | S1 (PNP)                                                                            | S1 (PNP)                                                                            | S1 (PNP)                                                                              | S1 (PNP)                                                                              | S1 (PNP)                                                                              |
| 5          |                                                                                     |                                                                                     |                                                                                     | S3 (PNP)                                                                            | S3 (PNP)                                                                            |                                                                                       | Analogue (out)                                                                        | S3 (PNP)                                                                              |
| 6          |                                                                                     |                                                                                     |                                                                                     | S4 (PNP)                                                                            | S4 (PNP)                                                                            |                                                                                       |                                                                                       | S4 (PNP)                                                                              |
| 7          |                                                                                     |                                                                                     |                                                                                     |                                                                                     | S5 (PNP)                                                                            |                                                                                       |                                                                                       | Analogue (out)                                                                        |
| 8          |                                                                                     |                                                                                     |                                                                                     |                                                                                     | S6 (PNP)                                                                            |                                                                                       |                                                                                       |                                                                                       |

## 9.6 Current settings

| Switching outputs       | Basic Settings | Diagnostics |
|-------------------------|----------------|-------------|
| SP1 / rP1               | oun1           | Sdbu        |
| dS1 / dr1 / ou1         | Pun1           | dPnn        |
| SP2 / rP2               | PH1            |             |
| dS2 / dr2 / ou2         | di S           |             |
| SP3 / rP3               | Loc            |             |
| dS3 / dr3 / ou3         |                |             |
| SP4 / rP4               |                |             |
| dS4 / dr4 / ou4         |                |             |
| SP5 / rP5               |                |             |
| dS5 / dr5 / ou5         |                |             |
| SP6 / rP6               |                |             |
| dS6 / dr6 / ou6         |                |             |
| <b>Analogue outputs</b> |                |             |
| R1Hi / R1Lo / Rdu1      |                |             |
| R2Hi / R2Lo / Rdu2      |                |             |

Date: \_\_\_\_\_

Signature: \_\_\_\_\_

## 9.7 Display ranges

| Name            | Menu/Unit | Display | Range from/<br>with unit | Range to/<br>with unit |
|-----------------|-----------|---------|--------------------------|------------------------|
| <b>Pressure</b> |           |         |                          |                        |
| Bar             | bAr       | b       | -100 bar                 | 999 bar                |
| mBar            | mbAr      | none    | -1000                    | 9999                   |
| Mpa             | MPa       | P       | -10.0 Mpa                | 99.9 Mpa               |
| psi             | PSI       | none    | -1000                    | 9999                   |
| <b>N/A</b>      |           |         |                          |                        |
| none            | non       | none    | -1000                    | 9999                   |
| none            | non1      | none    | -100.0                   | 999.9                  |
| none            | non2      | none    | -10.00                   | 99.99                  |

## 9.8 Display resolution


Range x = |Max - Min|

| none ( <i>nan</i> ), psi, mBar<br>(no decimal places) |            | Mpa<br>(up to 2 decimal places) |            |
|-------------------------------------------------------|------------|---------------------------------|------------|
| Range x                                               | Resolution | Range x                         | Resolution |
| x < 500                                               | 1          | x < 5                           | 0.01       |
| 500 <= x < 1000                                       | 2          | 5 <= x < 10                     | 0.02       |
| 1000 <= x < 2000                                      | 5          | 10 <= x < 20                    | 0.05       |
| 2000 <= x < 5000                                      | 10         | 20 <= x < 50                    | 0.1        |
| 5000 <= x < 10000                                     | 20         | 50 <= x < 100                   | 0.2        |
| 10000 <= x                                            | 50         | 100 <= x                        | 0.5        |

| none ( <i>nan1</i> )<br>(1 fixed-point number) |            | none ( <i>nan2</i> )<br>(2 fixed-point numbers) |            |
|------------------------------------------------|------------|-------------------------------------------------|------------|
| Range x                                        | Resolution | Range x                                         | Resolution |
| x < 50                                         | 0.1        | x < 5                                           | 0.01       |
| 50 <= x < 100                                  | 0.2        | 5 <= x < 10                                     | 0.02       |
| 100 <= x < 200                                 | 0.5        | 10 <= x < 20                                    | 0.05       |
| 200 <= x < 500                                 | 1          | 20 <= x < 50                                    | 0.1        |
| 500 <= x < 1000                                | 2          | 50 <= x < 100                                   | 0.2        |
| 1000 <= x                                      | 5          | 100 <= x                                        | 0.5        |

**Example** no unit: Min = 100, Max = 1500 -> x = 1500 - 100 = 1400 -> Resolution = 5

9.9 Menu Sequence Overview

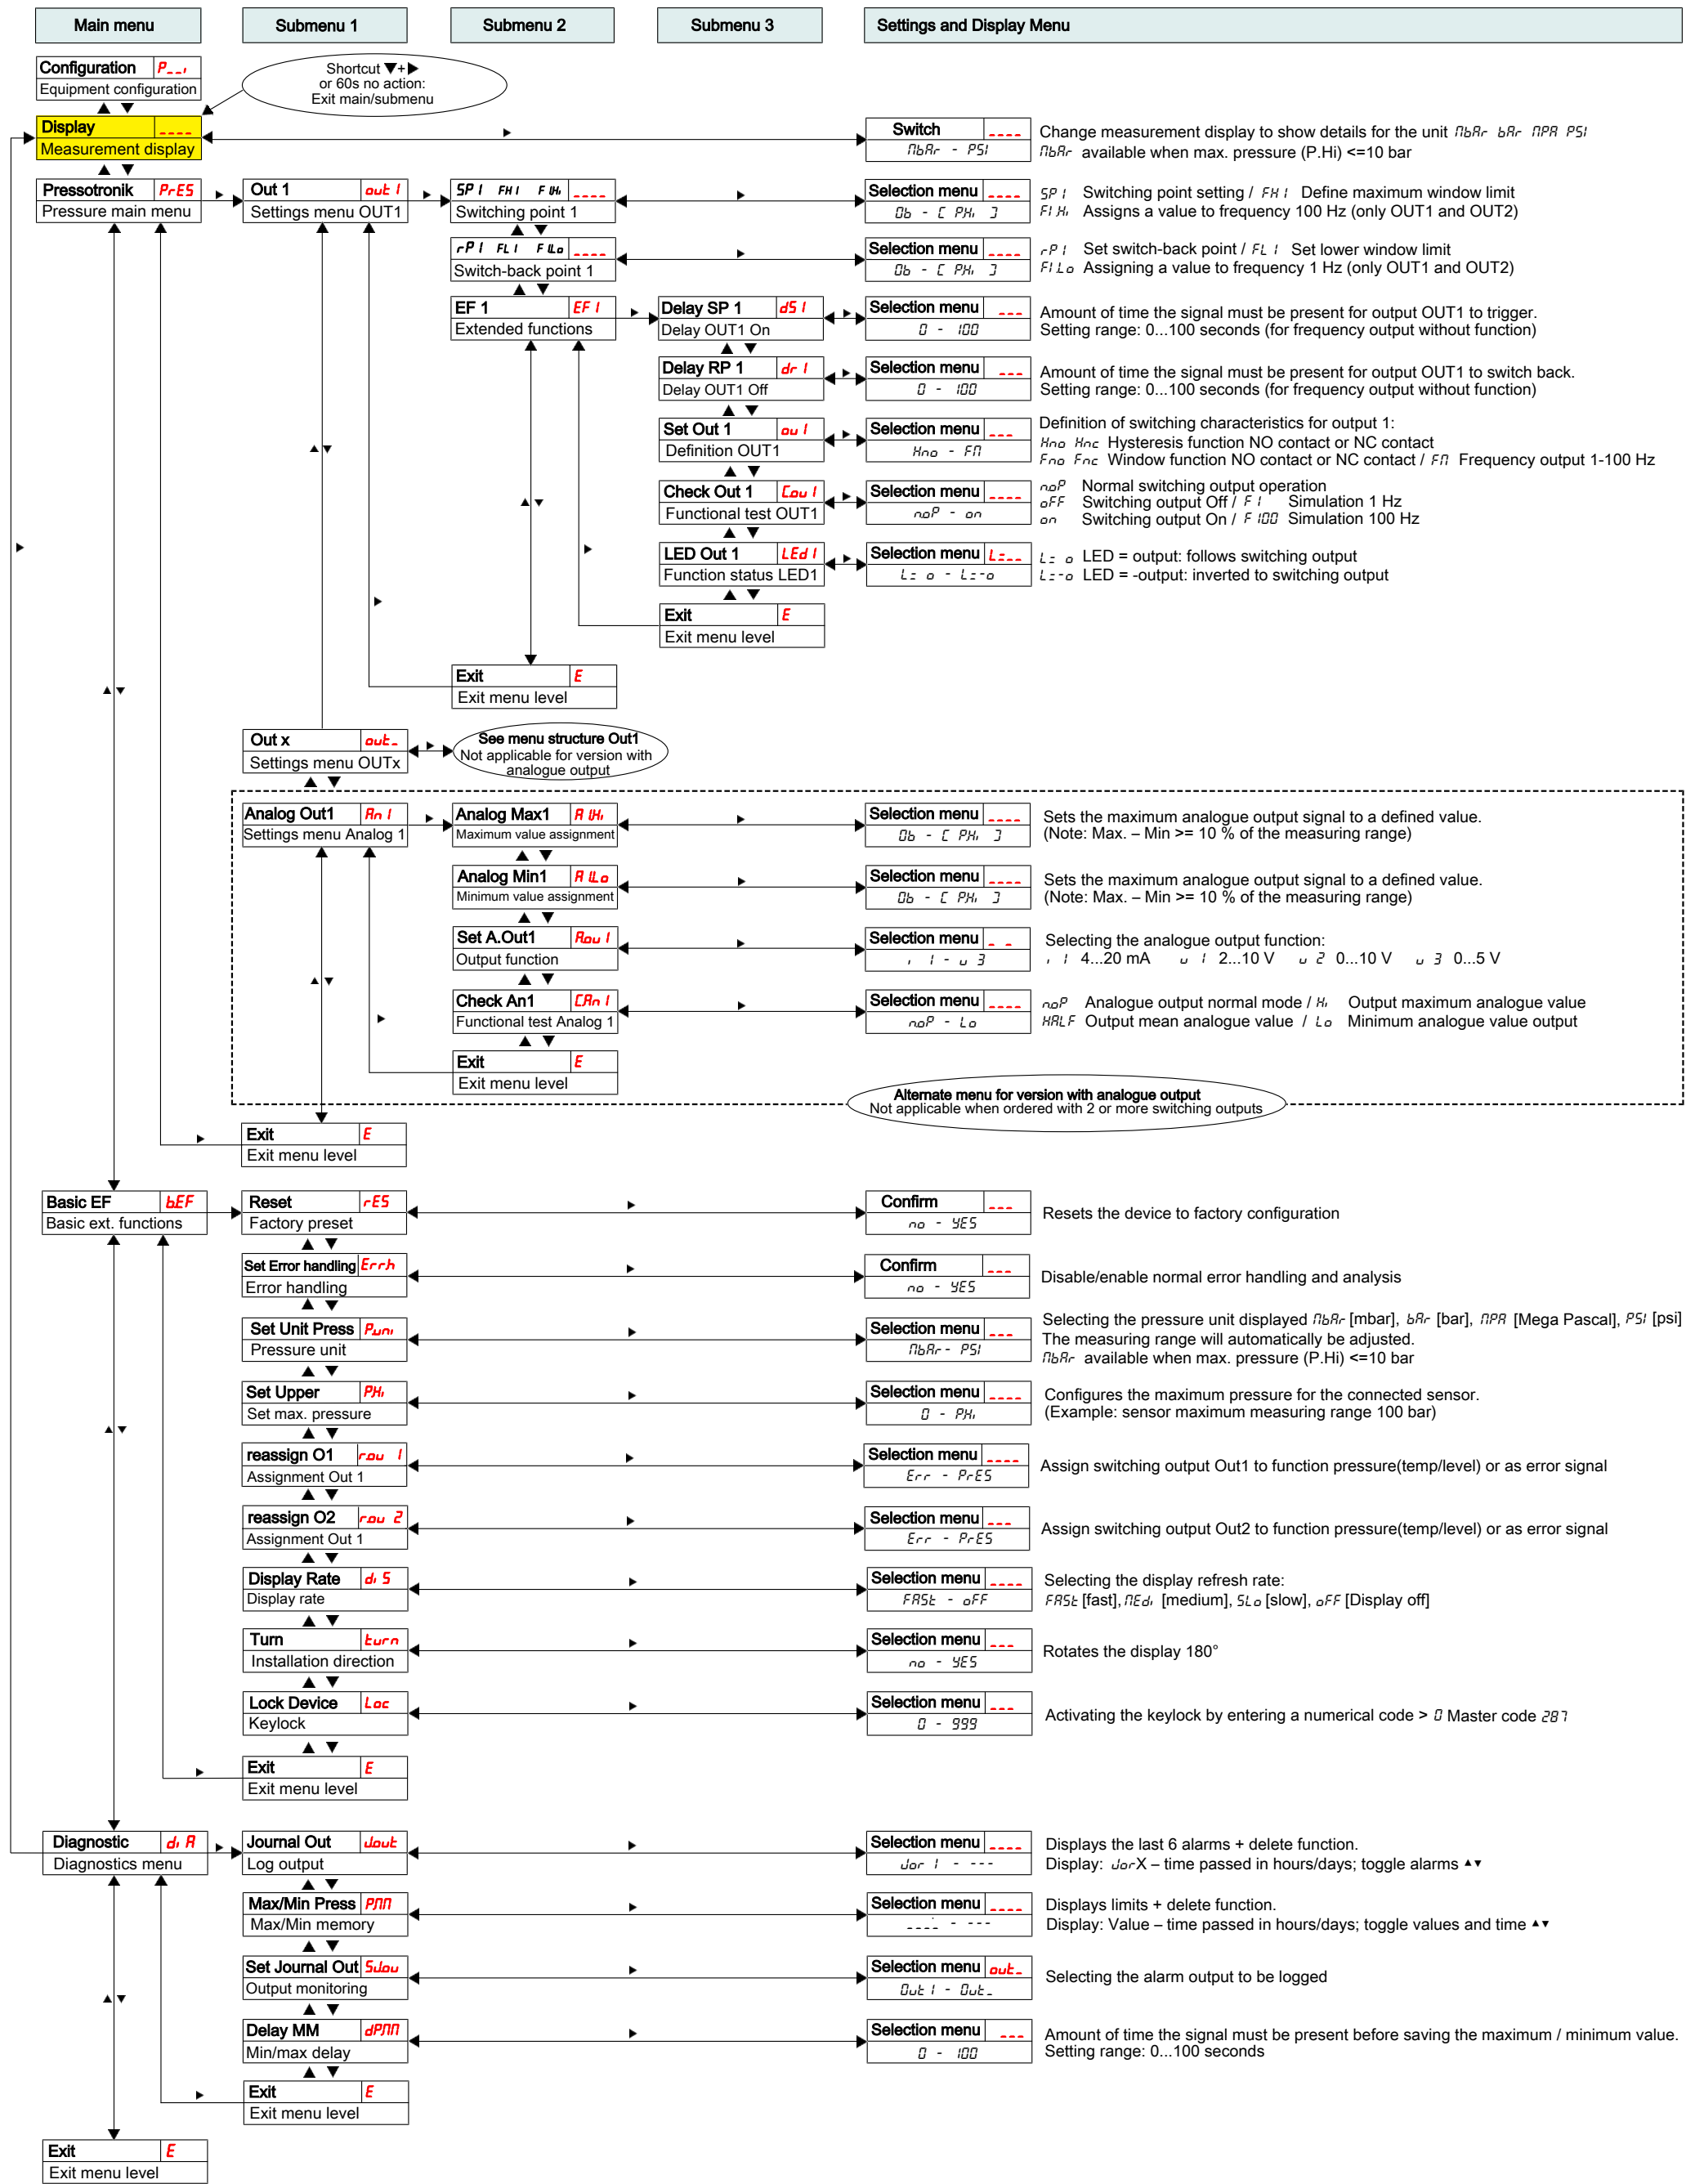

## **10 Attached documents**

- Declaration of conformity: KX130022
- RMA - Decontamination Statement

**EU-Konformitätserklärung**  
**EU-declaration of conformity**



Hiermit erklärt Bühler Technologies GmbH,  
dass die nachfolgenden Produkte den  
wesentlichen Anforderungen der Richtlinie

*Herewith declares Bühler Technologies GmbH  
that the following products correspond to the  
essential requirements of Directive*

**2014/30/EU**  
**(Elektromagnetische Verträglichkeit / *electromagnetic compatibility*)**

in ihrer aktuellen Fassung entsprechen.

*in its actual version.*

**Produkt / products:** Elektronische Druckschalter und – fähler /  
*Electronic pressure switches and sensors*

**Typ / type:** Pressotronik 77

Die Betriebsmittel sind ein Drucksensor bzw. Druckschalter zur Anzeige und Steuerung des Druckes in  
einem Fluidsystem.

*The equipment is a pressure sensor respectively pressure switch to control and display the pressure in a  
fluid system.*

Das oben beschriebene Produkt der Erklärung erfüllt die einschlägigen  
Harmonisierungsrechtsvorschriften der Union:

*The object of the declaration described above is in conformity with the relevant Union harmonisation  
legislation:*

**EN 61326-1:2013**

Die alleinige Verantwortung für die Ausstellung dieser Konformitätserklärung trägt der Hersteller.  
*This declaration of conformity is issued under the sole responsibility of the manufacturer.*

Dokumentationsverantwortlicher für diese Konformitätserklärung ist Herr Stefan Eschweiler mit  
Anschrift am Firmensitz.

*The person authorised to compile the technical file is Mr. Stefan Eschweiler located at the company's  
address.*

Ratingen, den 20.04.2016

A handwritten signature in black ink, appearing to read 'Stefan Eschweiler'.

Stefan Eschweiler  
Geschäftsführer – Managing Director

A handwritten signature in blue ink, appearing to read 'Frank Pospiech'.

Frank Pospiech  
Geschäftsführer – Managing Director

## UK Declaration of Conformity



The manufacturer Bühler Technologies GmbH declares, under the sole responsibility, that the product complies with the requirements of the following UK legislation:

### Electromagnetic Compatibility Regulations 2016

**Product:** Electronic pressure switches and sensors

**Type:** Pressotronik 77

The equipment is a pressure sensor respectively pressure switch to control and display the pressure in a fluid system.

The object of the declaration described above is in conformity with the relevant designated standards:

**EN 61326-1:2013**

Ratingen in Germany, 01.11.2022

A handwritten signature in blue ink, appearing to read 'Stefan Eschweiler', written over a horizontal line.

Stefan Eschweiler  
Managing Director

A handwritten signature in blue ink, appearing to read 'Frank Pospiech', written over a horizontal line.

Frank Pospiech  
Managing Director

# RMA-Formular und Erklärung über Dekontaminierung

## RMA-Form and explanation for decontamination



RMA-Nr./ RMA-No.

Die RMA-Nr. bekommen Sie von Ihrem Ansprechpartner im Vertrieb oder Service. Bei Rücksendung eines Altgeräts zur Entsorgung tragen Sie bitte in das Feld der RMA-Nr. "WEEE" ein./ You may obtain the RMA number from your sales or service representative. When returning an old appliance for disposal, please enter "WEEE" in the RMA number box.

Zu diesem Rücksendeschein gehört eine Dekontaminierungserklärung. Die gesetzlichen Vorschriften schreiben vor, dass Sie uns diese Dekontaminierungserklärung ausgefüllt und unterschrieben zurücksenden müssen. Bitte füllen Sie auch diese im Sinne der Gesundheit unserer Mitarbeiter vollständig aus./ This return form includes a decontamination statement. The law requires you to submit this completed and signed decontamination statement to us. Please complete the entire form, also in the interest of our employee health.

### Firma/ Company

Firma/ Company

Straße/ Street

PLZ, Ort/ Zip, City

Land/ Country

Gerät/ Device

Anzahl/ Quantity

Auftragsnr./ Order No.

### Ansprechpartner/ Person in charge

Name/ Name

Abt./ Dept.

Tel./ Phone

E-Mail

Serien-Nr./ Serial No.

Artikel-Nr./ Item No.

### Grund der Rücksendung/ Reason for return

- ☐ Kalibrierung/ Calibration ☐ Modifikation/ Modification  
☐ Reklamation/ Claim ☐ Reparatur/ Repair  
☐ Elektroaltgerät/ Waste Electrical & Electronic Equipment (WEEE)  
☐ andere/ other

bitte spezifizieren/ please specify

### Ist das Gerät möglicherweise kontaminiert?/ Could the equipment be contaminated?

- ☐ Nein, da das Gerät nicht mit gesundheitsgefährdenden Stoffen betrieben wurde./ No, because the device was not operated with hazardous substances.  
☐ Nein, da das Gerät ordnungsgemäß gereinigt und dekontaminiert wurde./ No, because the device has been properly cleaned and decontaminated.  
☐ Ja, kontaminiert mit:/ Yes, contaminated with:



☐  
explosiv/  
explosive



☐  
entzündlich/  
flammable



☐  
brandfördernd/  
oxidizing



☐  
komprimierte  
Gase/  
compressed  
gases



☐  
ätzend/  
caustic



☐  
giftig,  
Lebensgefahr/  
poisonous, risk  
of death



☐  
gesundheitsge-  
fährdend/  
harmful to  
health



☐  
gesund-  
heitsschädlich/  
health hazard



☐  
umweltge-  
fährdend/  
environmental  
hazard

### Bitte Sicherheitsdatenblatt beilegen! / Please enclose safety data sheet!

Das Gerät wurde gespült mit:/ The equipment was purged with:

Diese Erklärung wurde korrekt und vollständig ausgefüllt und von einer dazu befugten Person unterschrieben. Der Versand der (dekontaminierten) Geräte und Komponenten erfolgt gemäß den gesetzlichen Bestimmungen.

This declaration has been filled out correctly and completely, and signed by an authorized person. The dispatch of the (decontaminated) devices and components takes place according to the legal regulations.

Falls die Ware nicht gereinigt, also kontaminiert bei uns eintrifft, muss die Firma Bühler sich vorbehalten, diese durch einen externen Dienstleister reinigen zu lassen und Ihnen dies in Rechnung zu stellen.

Should the goods not arrive clean, but contaminated, Bühler reserves the right, to commission an external service provider to clean the goods and invoice it to your account.

Firmenstempel/ Company Sign

Datum/ Date

rechtsverbindliche Unterschrift/ Legally binding signature



### **Vermeiden von Veränderung und Beschädigung der einzusendenden Baugruppe**

Die Analyse defekter Baugruppen ist ein wesentlicher Bestandteil der Qualitätssicherung der Firma Bühler Technologies GmbH. Um eine aussagekräftige Analyse zu gewährleisten muss die Ware möglichst unverändert untersucht werden. Es dürfen keine Veränderungen oder weitere Beschädigungen auftreten, die Ursachen verdecken oder eine Analyse unmöglich machen.

### **Umgang mit elektrostatisch sensiblen Baugruppen**

Bei elektronischen Baugruppen kann es sich um elektrostatisch sensible Baugruppen handeln. Es ist darauf zu achten, diese Baugruppen ESD-gerecht zu behandeln. Nach Möglichkeit sollten die Baugruppen an einem ESD-gerechten Arbeitsplatz getauscht werden. Ist dies nicht möglich sollten ESD-gerechte Maßnahmen beim Austausch getroffen werden. Der Transport darf nur in ESD-gerechten Behältnissen durchgeführt werden. Die Verpackung der Baugruppen muss ESD-konform sein. Verwenden Sie nach Möglichkeit die Verpackung des Ersatzteils oder wählen Sie selber eine ESD-gerechte Verpackung.

### **Einbau von Ersatzteilen**

Beachten Sie beim Einbau des Ersatzteils die gleichen Vorgaben wie oben beschrieben. Achten Sie auf die ordnungsgemäße Montage des Bauteils und aller Komponenten. Versetzen Sie vor der Inbetriebnahme die Verkabelung wieder in den ursprünglichen Zustand. Fragen Sie im Zweifel beim Hersteller nach weiteren Informationen.

### **Einsenden von Elektroaltgeräten zur Entsorgung**

Wollen Sie ein von Bühler Technologies GmbH stammendes Elektroprodukt zur fachgerechten Entsorgung einsenden, dann tragen Sie bitte in das Feld der RMA-Nr. „WEEE“ ein. Legen Sie dem Altgerät die vollständig ausgefüllte Dekontaminierungserklärung für den Transport von außen sichtbar bei. Weitere Informationen zur Entsorgung von Elektroaltgeräten finden Sie auf der Webseite unseres Unternehmens.

### **Avoiding alterations and damage to the components to be returned**

Analysing defective assemblies is an essential part of quality assurance at Bühler Technologies GmbH. To ensure conclusive analysis the goods must be inspected unaltered, if possible. Modifications or other damages which may hide the cause or render it impossible to analyse are prohibited.

### **Handling electrostatically conductive components**

Electronic assemblies may be sensitive to static electricity. Be sure to handle these assemblies in an ESD-safe manner. Where possible, the assemblies should be replaced in an ESD-safe location. If unable to do so, take ESD-safe precautions when replacing these. Must be transported in ESD-safe containers. The packaging of the assemblies must be ESD-safe. If possible, use the packaging of the spare part or use ESD-safe packaging.

### **Fitting of spare parts**

Observe the above specifications when installing the spare part. Ensure the part and all components are properly installed. Return the cables to the original state before putting into service. When in doubt, contact the manufacturer for additional information.

### **Returning old electrical appliances for disposal**

If you wish to return an electrical product from Bühler Technologies GmbH for proper disposal, please enter "WEEE" in the RMA number box. Please attach the fully completed decontamination declaration form for transport to the old appliance so that it is visible from the outside. You can find more information on the disposal of old electrical appliances on our company's website.

